


ASSEMBLY INSTRUCTIONS FOR #175109

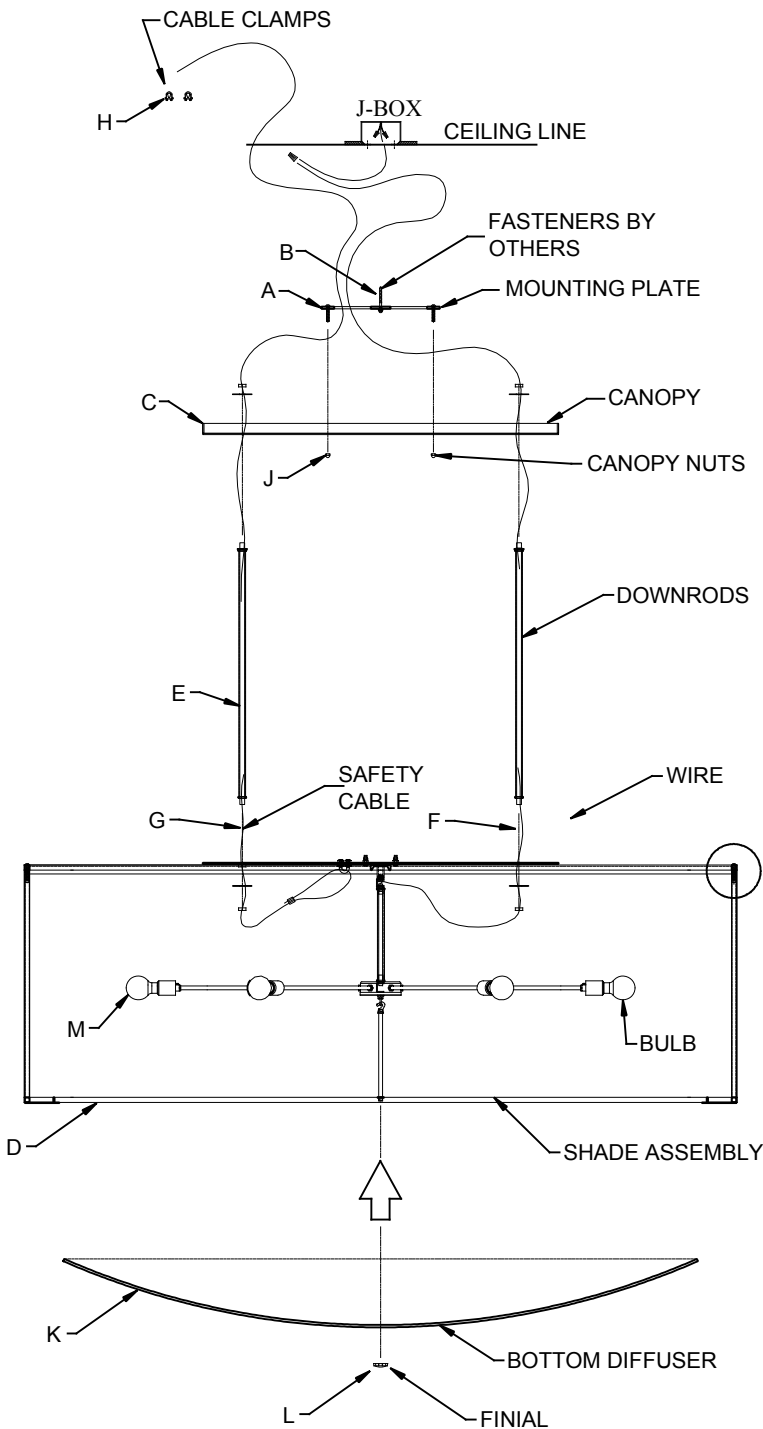


FIXTURE SIDE SECTION VIEW

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1) ATTACH MOUNTING PLATE (A) TO CEILING WITH FASTENERS (B) PROVIDED BY OTHERS.
- 2) FASTEN CANOPY (C) TO SHADE ASSEMBLY (D) WITH DOWNRODS (E)
- 3) THREAD WIRE (F) THROUGH DOWNRODS (E) AND MAKE WIRING CONNECTION AT "J" BOX AS PER LOCAL ELECTRICAL CODES.
- 4) THREAD SAFETY CABLE (G) THROUGH DOWNROD (E) TO STRUCTURALLY SECURE LOCATION ABOVE FIXTURE WITH CABLE CLAMPS (H).
- 5) SECURE CANOPY (C) TO CEILING WITH CANOPY NUTS (J).
- 6) USE LOAD STRAP TO BOW BOTTOM DIFFUSER (K) AND SLIDE DIFFUSER UP INTO PLACE FROM BOTTOM OF SHADE ASSEMBLY (D)
- 7) INSTALL FINIAL (L) TO CENTER OF BOTTOM DIFFUSER (K)
- 8) INSTALL LAMPING (BULBS) (M). BULBS PROVIDED BY OTHERS.

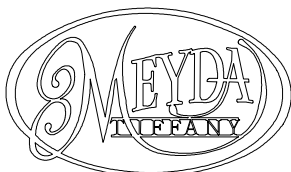

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at www.meyda.com