


# ASSEMBLY INSTRUCTIONS FOR #175488

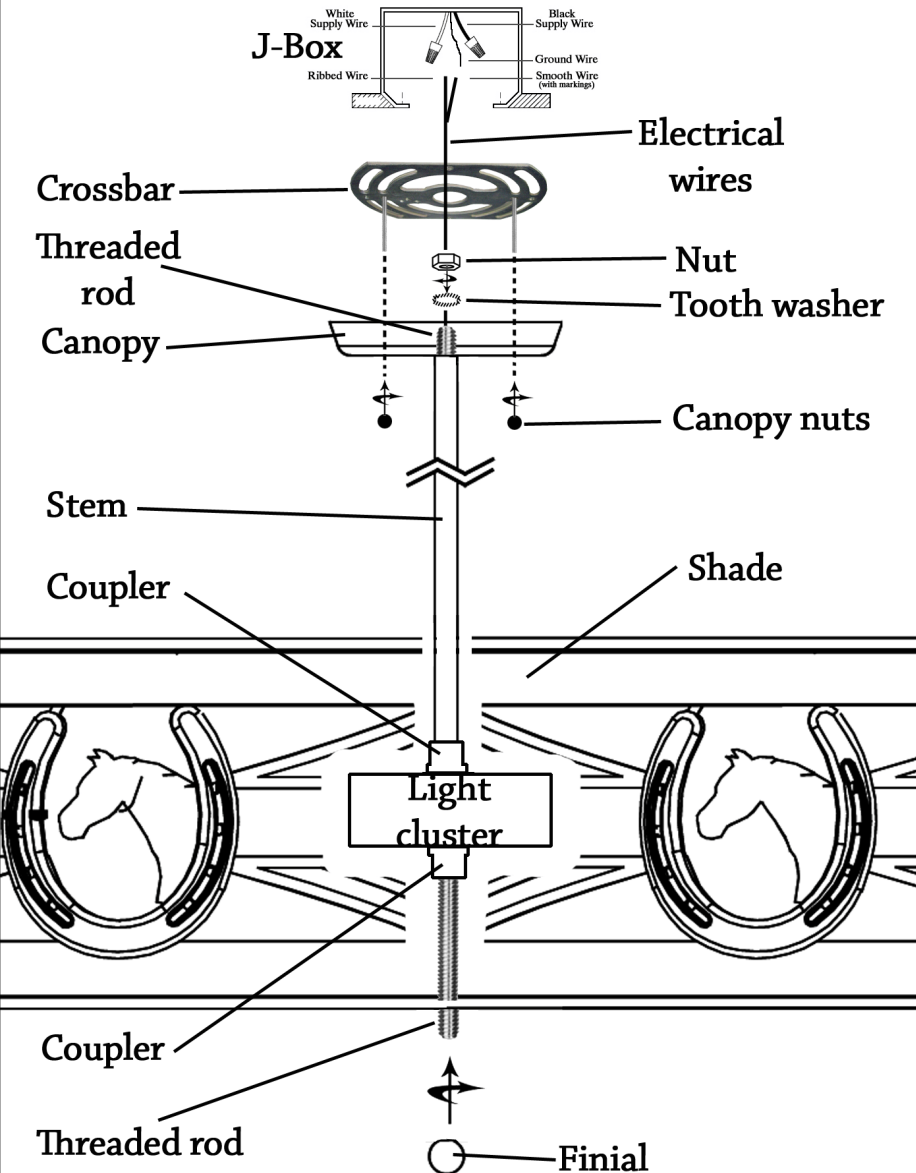


## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Attach crossbar to ceiling or J-Box. Make sure there is two bolts pointing down to receive canopy.
- 2.) Attach shade to light cluster: Screw threaded rod into the bottom of light cluster. Screw a nut onto threaded rod maybe an inch from the bottom. Follow that with a washer. Slide shade up onto threaded rod, meeting the washer just placed. Secure shade in place by screwing finial onto the end of the threaded rod.
- 3.) Raise fixture to ceiling and connect all electrical wires as per your local codes. Slide canopy up onto the two bolts pointing down towards fixture. Secure fixture to ceiling by screwing the two canopy nuts onto the two bolts from crossbar.
- 4.) Bulb your fixture, power on, enjoy your new fixture!

2ND AVE.™

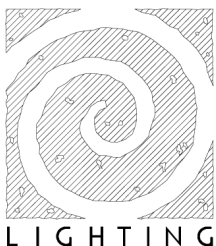

*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-843-1602

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at [www.2ndave.com](http://www.2ndave.com)