


ASSEMBLY INSTRUCTIONS FOR #177917

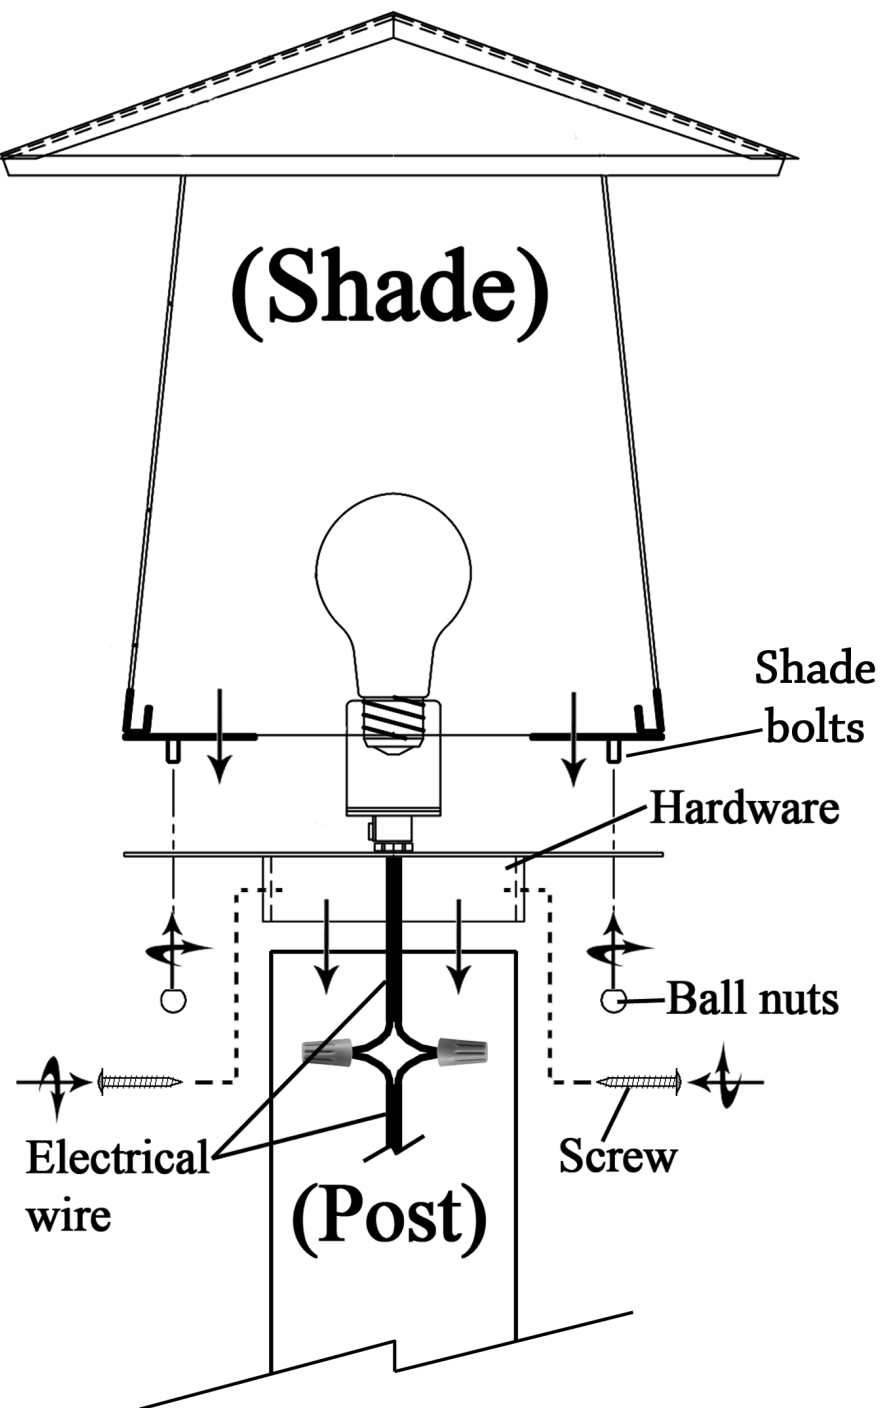


IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR
CIRCUIT BREAKER BOX BEFORE STARTING
INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL
PARTS BEFORE ASSEMBLY. BULBS ARE NOT
INCLUDED

- 1.) Bring hardware to post, & connect electrical wires as per your local codes.
- 2.) Secure hardware level to post, using the holes in the base of the hardware.
- 3.) Bolt your post mount now, (bulbs provided by others).
- 4.) Place shade onto hardware so that the shade bolts penetrate the hardware through the two holes on either side of the hardware. Secure in place by screwing the two ball nuts onto the shade bolts.
- 5.) Power on, enjoy your new post mount!

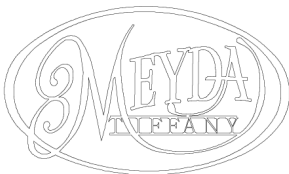

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at www.meyda.com