
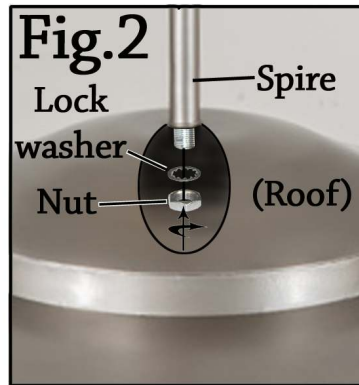


ASSEMBLY INSTRUCTIONS FOR #178093


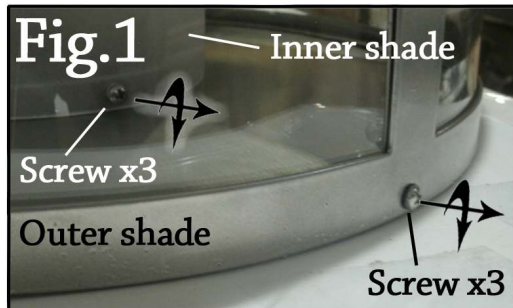


IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Remove the outer shade first by unscrewing the three screws located around the base of outer shade. Remove the inner shade by unscrewing the three screws located at the base of inner shade. (Fig.1)
- 2.) Attach the crossbar to your pier or J-Box. Be sure there is two bolts pointing up ready to receive the fixture base. Bring fixture base to pier and connect all electrical wires as per your local codes. Slide base onto the two crossbar bolts. Secure flush to pier by screwing the two base nuts onto bolts. (Fig.3)
- 3.) Bulb your fixture now. (Bulbs provided by others). Replace inner shade and screw the three screws back into place. (Fig.1)
- 4.) Attach spire to roof: have someone hold spire in position (through center of roof) while someone else places lock washer onto nipple and then screw nut onto nipple. (Fig.2)
- 5.) Replace outer shade back onto fixture base, and secure in position with the three screws that you removed in step one. (Fig.1)

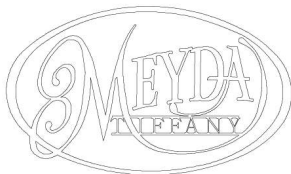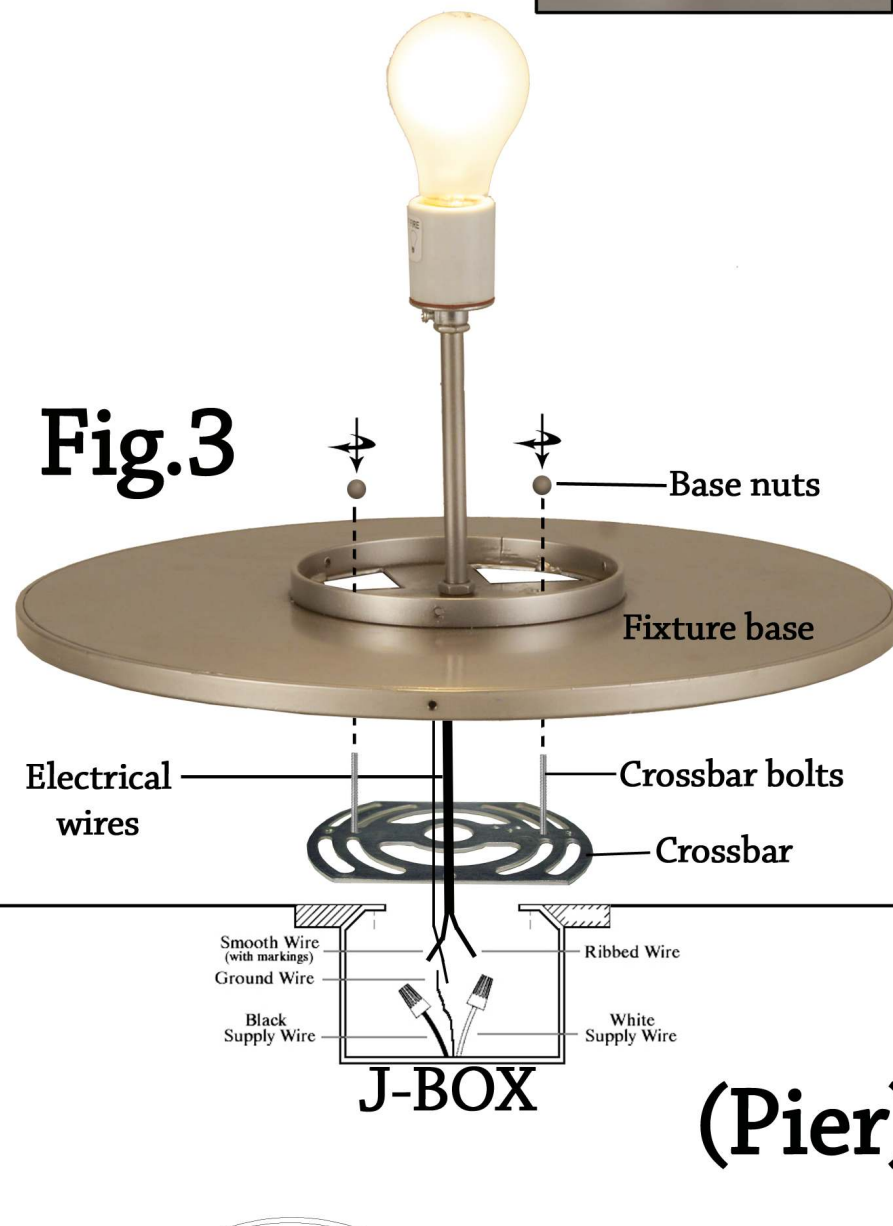

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at www.meyda.com