

INSTALLATION INSTRUCTIONS

FOR ITEM 179911 LOXLEY GOLPE 16 LT CHANDELIER

Meyda
CUSTOM LIGHTING

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*


Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

FIXTURE COMPONENTS

- | | |
|---------------------------|------------------------------------|
| A. CHANDELIER BODY | E. HUB W/ 1 ARM |
| B. ACRYLIC SHADE (QTY 16) | F. ARM (QTY 3) |
| C. CANOPY ASSEMBLY | G. 204" ANTI-SWAY CHAIN (QTY 4) |
| D. 156" CHAIN | H. ANTI-SWAY WALL HARDWARE (QTY 4) |

Caution:

Fixture is OVERWEIGHT and not suitable to be hung from standard J-BOX.
Be sure power is off at the main breaker box prior to installation.
Read all instructions in their entirety before beginning installation.

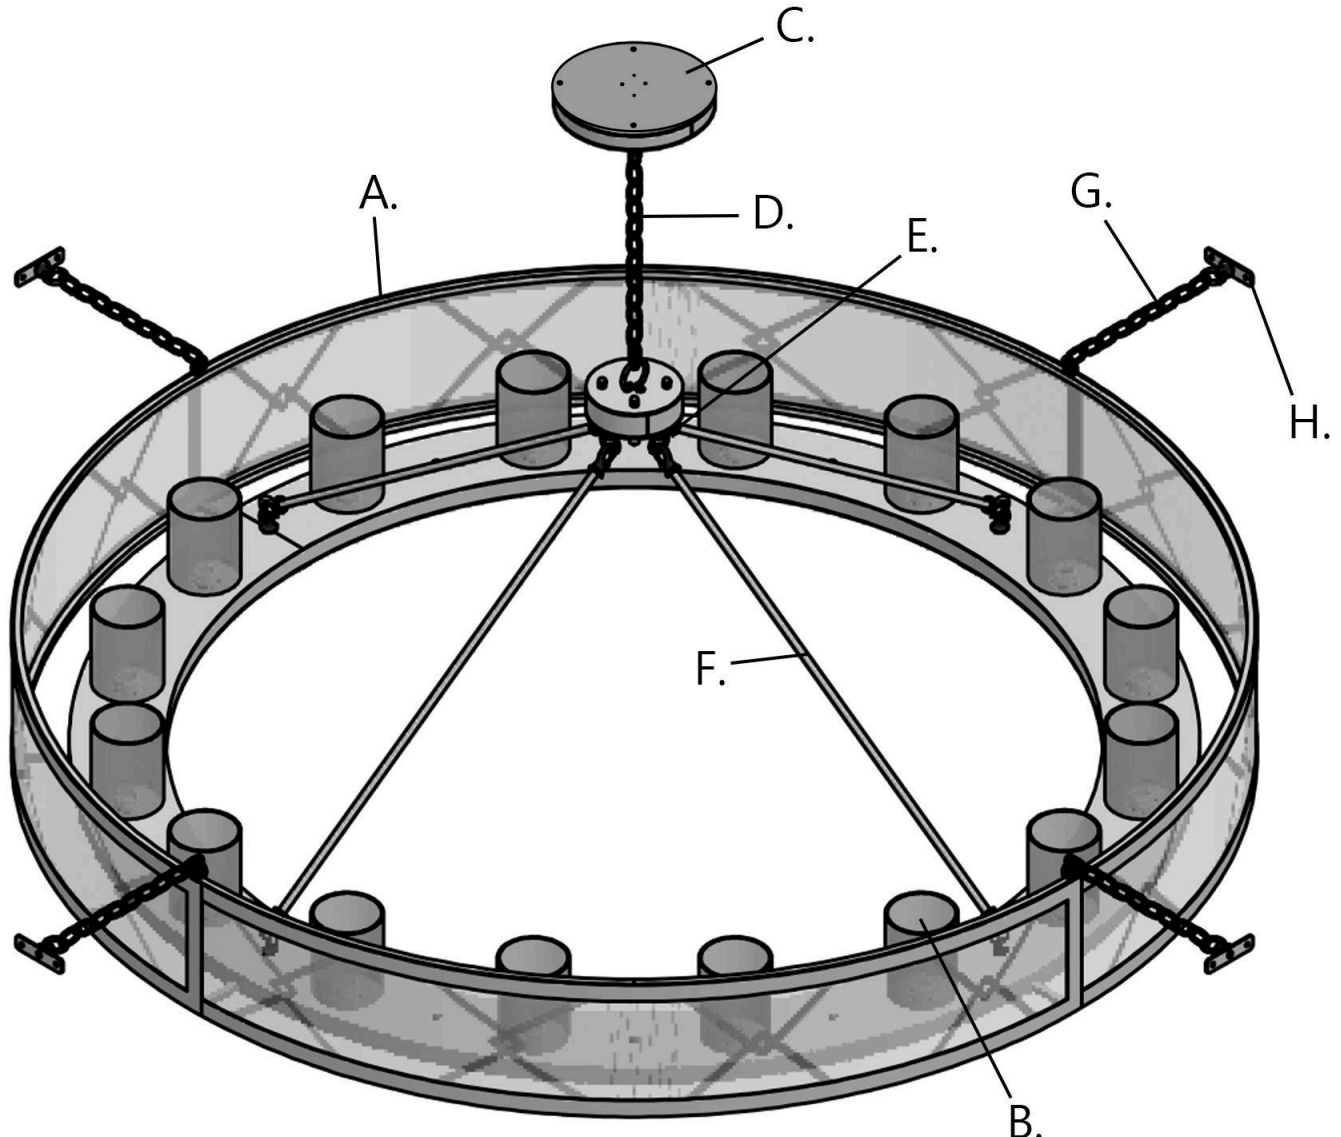

INSTALLATION INSTRUCTIONS

FOR ITEM 179911 LOXLEY GOLPE 16 LT CHANDELIER

Meyda
CUSTOM LIGHTING

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Caution:
Fixture is OVERWEIGHT and not suitable to be hung from standard J-BOX.
Be sure power is off at the main breaker box prior to installation.
Read all instructions in their entirety before beginning installation.

1. Carefully unpack all components and make certain that everything is accounted for.
2. Remove Acorn Nuts from Canopy Assembly to release Mounting Plate. Reserve Nuts for later use.
3. Affix Mounting Plate to ceiling ensuring that connection is suitable to hold a minimum 200lbs and that electrical Supply Wires remain accessible.
4. Attach desired length of Chain to Quick Link on Hub.
5. Weave Fixture Lead Wire through every 3rd Link of Chain.
6. Feed Chain & Lead Wire through central opening in Canopy and allow Canopy to rest on Hub.
7. Attach loose end of Chain to Quick Link on Mounting Plate.
8. Make electrical connection from Fixture Lead Wires to Structure Supply Wires following all Local Codes and Procedures.
9. Slide Canopy up Chain and over Mounting Plate Loop and Studs and secure with Reserved Acorn Nuts.
10. Hang Arms from vacant Loops on Hub.
11. Attach Arms to Loops on Chandelier Body.
Be certain to align Powered Arm to Loop on Chandelier Body with Power Receptacle and make connection.
12. Install 16 GU24 Base 10Watt LED Bulbs(not included) into Sockets.
13. Place Shades into Shade Wells on Pendant Body.
14. Affix Anti-Sway Wall Mount Hardware to desired locations.
15. Attach necessary length of Anti-Sway Chain to Chandelier Body and connect to Wall Mount Hardware.
16. Power on and ENJOY!!!

