


# ASSEMBLY INSTRUCTIONS FOR # 181182

**Fig.A**

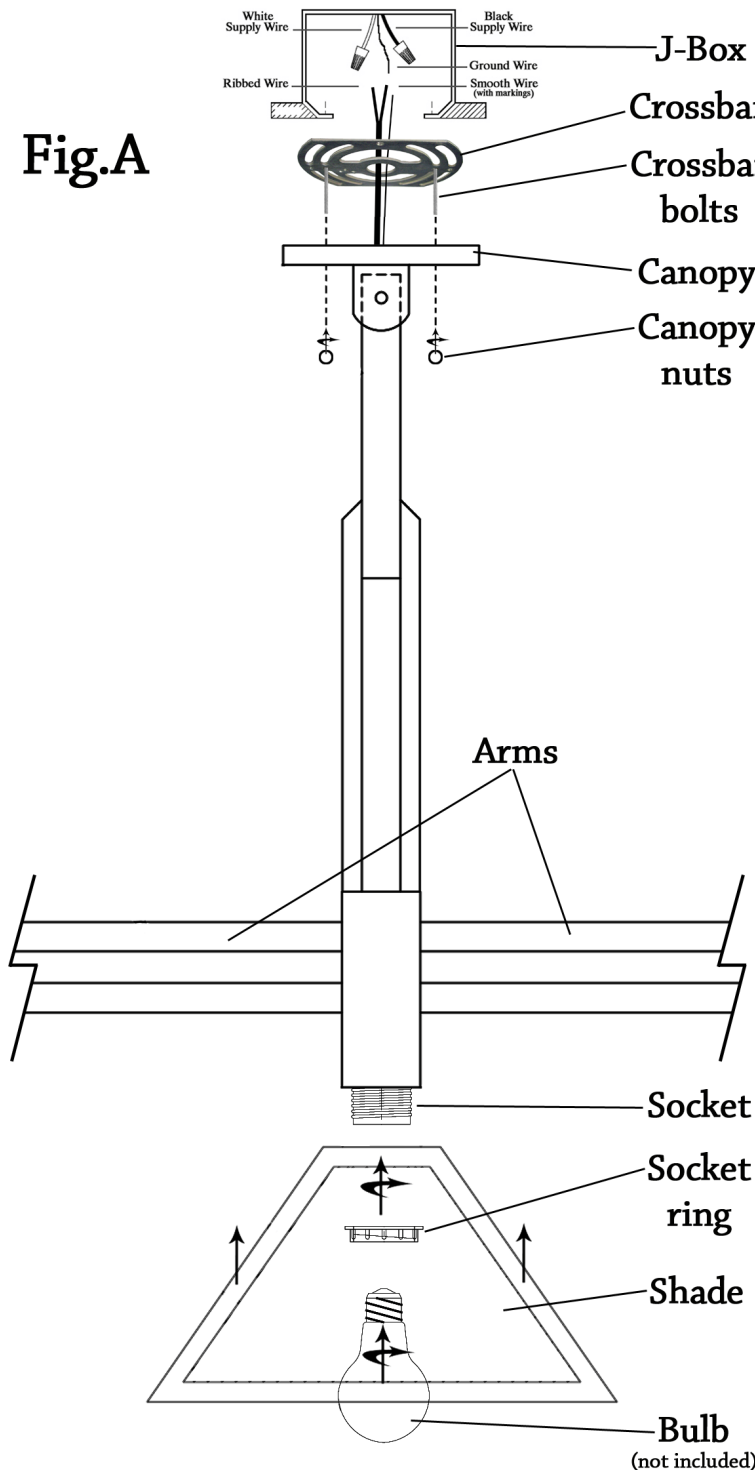

## IMPORTANT



TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

You may attach shades before attaching rest of fixture to ceiling. Skip to step 4 to attach shades first. See Fig.A for steps 1,3,4

- 1.) Attach crossbar to ceiling or J-Box. Be sure there is two bolts pointing down ready to receive canopy.
- 2.) Assemble canopy: Place canopy over downrod, and send the threaded rod through the dog ears and the downrod. Secure together by screwing the two acorn nuts onto the threaded rod. (Fig.B)
- 3.) Bring canopy/fixture to ceiling, and connect electrical wires as per your local electrical code. Slide canopy up the two crossbar bolts and secure flush to ceiling by screwing the two canopy nuts onto the two crossbar bolts.
- 4.) Attach shades: Each socket will penetrate the center of each shade. Screw the socket rings onto the sockets.
- 5.) Power on, enjoy your new fixture!

**Fig.B**

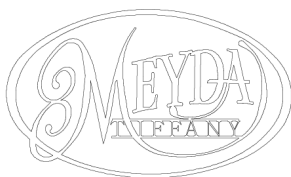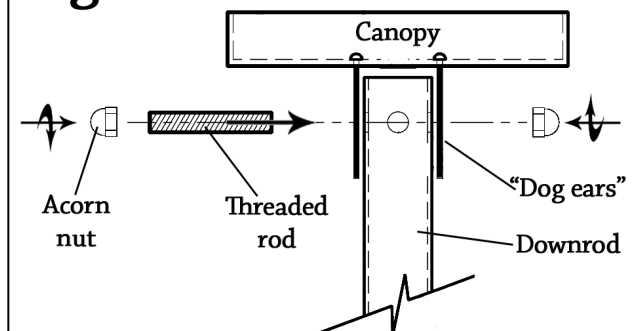

*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at [www.meyda.com](http://www.meyda.com)