

# ASSEMBLY INSTRUCTIONS FOR # 181185

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR  
CIRCUIT BREAKER BOX BEFORE STARTING  
INSTALLATION



CAREFULLY UNPACK AND IDENTIFY ALL  
PARTS BEFORE ASSEMBLY. BULBS ARE NOT  
INCLUDED

1.) Attach crossbar to J-Box or wall. Be sure there is two bolts pointing away from wall, ready to receive backplate. Bring backplate to wall connect electrical wires as per your local electrical code. Slide backplate onto the two crossbar bolts. Secure flush to wall by screwing the two backplate nuts onto the two crossbar bolts.

2.) Bulb your fixture, (Bulbs provided by others).

3.) Place shade (top first) onto backplate. The top of the shade has a bar across the back, this will hook onto the backplate tabs. The bottom of the shade will pivot flush to wall. Once shade is flush with wall, screw the set screw in through the bottom of the shade and into the hole located at the bottom of the backplate.

4.) Power on, enjoy your new fixture!

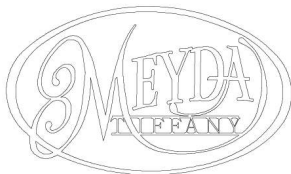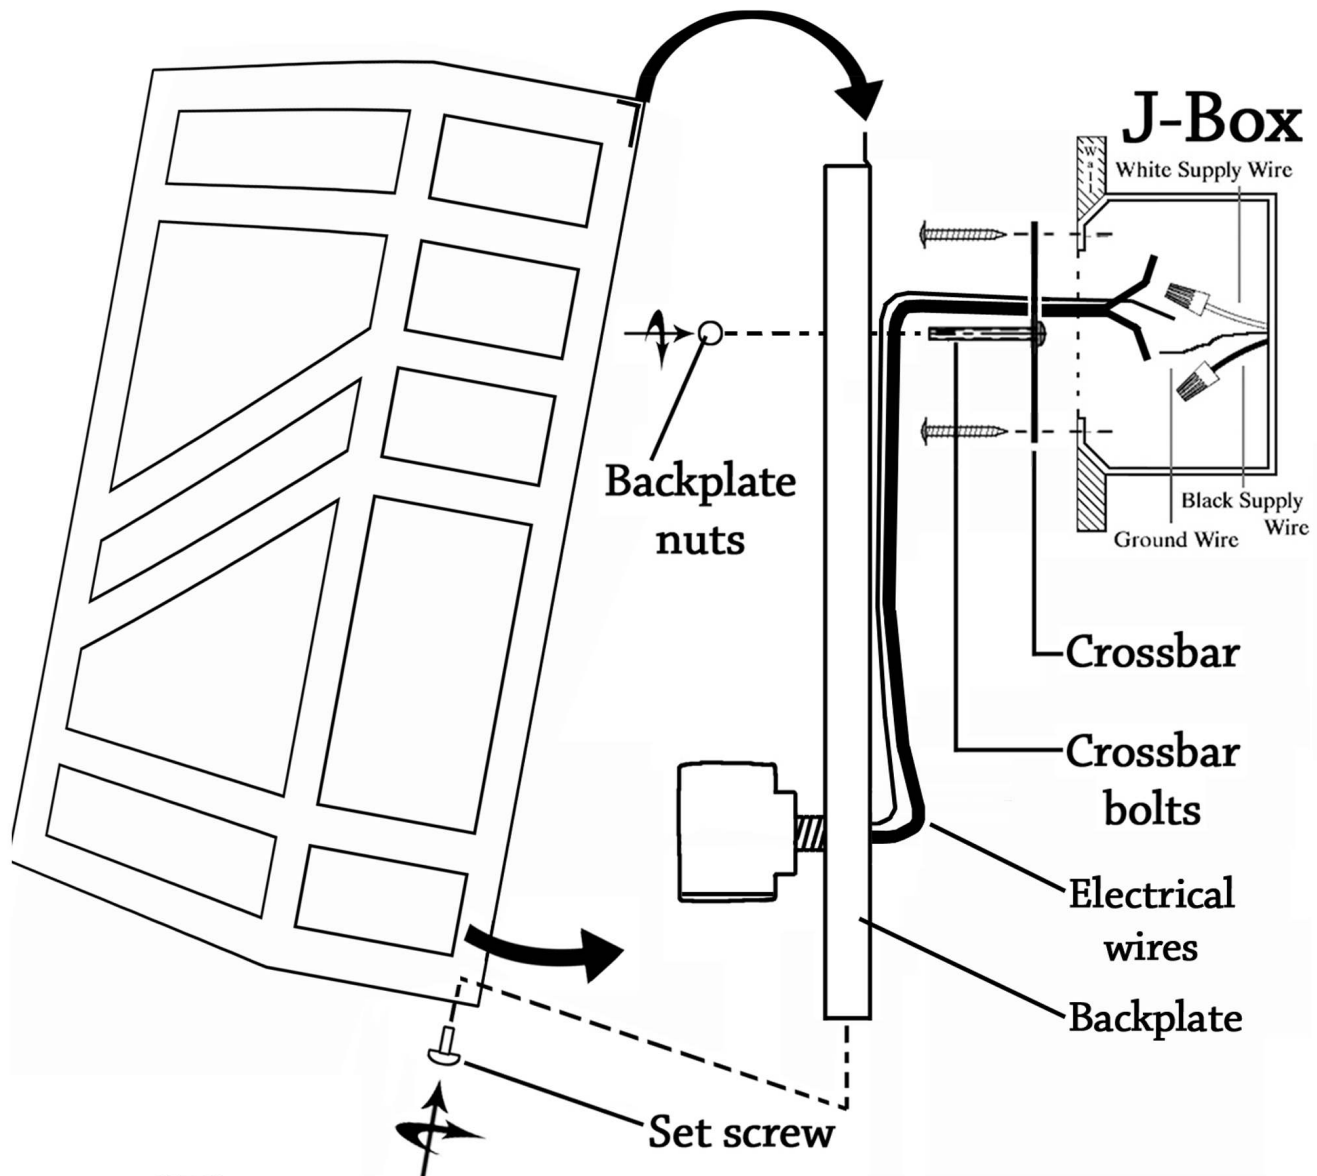

*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at [www.meyda.com](http://www.meyda.com)