


# ASSEMBLY INSTRUCTIONS FOR #18845 (M263-SG649-16R-1)

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Attach crossbar with threaded rod to J-Box.
2. Place canopy to J-Box onto threaded rod and attach finial. DO NOT tighten canopy to ceiling with finial.
3. Wire per local electrical code.
4. Tighten canopy to ceiling with finial.
5. Place shade onto fitter and secure with uno ring, place light bulb into socket.
6. Turn power on to J-Box.

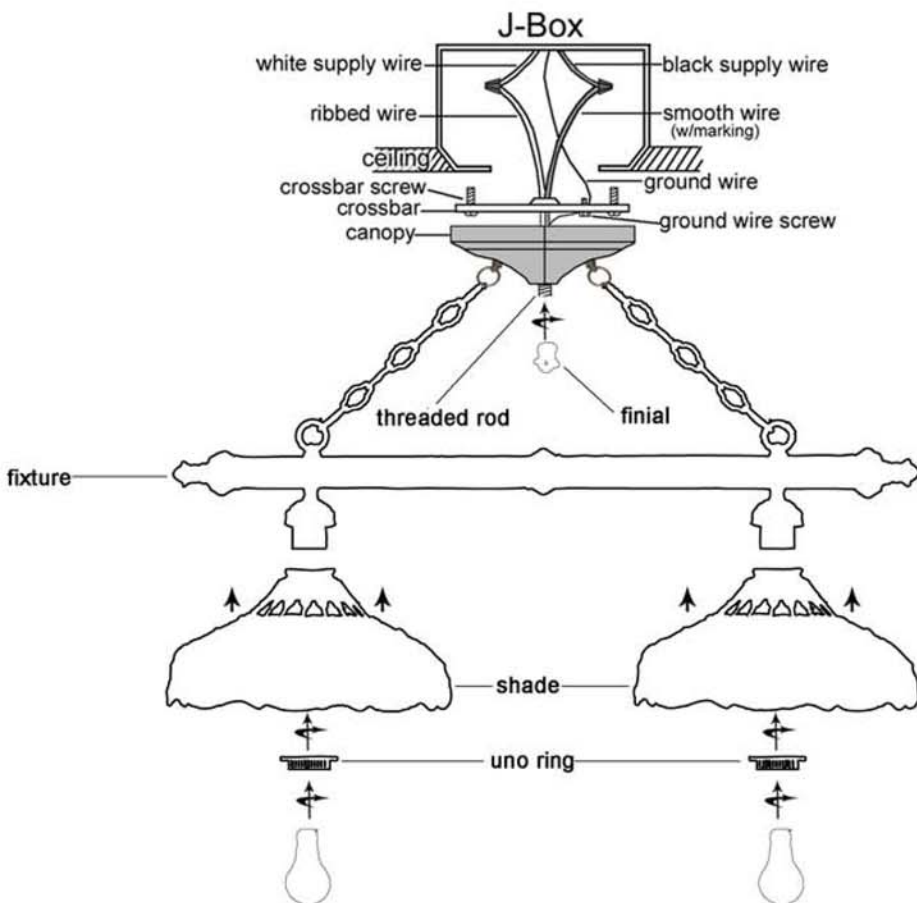

*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)