

INSTALLATION INSTRUCTIONS

FOR ITEM 188860 CRETELLA 108 LT 6 TIER CHANDELIER

Meyda
CUSTOM LIGHTING

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

FIXTURE COMPONENTS

1. TIER A + B
2. TIER C (4 TIER)
3. 21" CONNECTION ARMS (QTY 4)
4. 96" WELDED CHAIN
5. CANOPY ASSEMBLY
6. JACK CHAIN
7. 7"W x 5"H GLASS SHADES (QTY 108)

Caution: Be sure power is off at the main breaker box prior to installation. Read all instructions in their entirety before beginning installation.

1. Carefully unpack all components and make certain that everything is accounted for.
2. Remove Acorn Nuts from Canopy Assembly to release Mounting Plate.
3. Attach Mounting Plate to structure ensuring that connection is suitable for minimum 650lbs and that Line Wires remain accessible.
4. Connect desired length of Chain to Quick Link at top of Tier A + B.
5. Unravel Electrical Wire, Copper Ground Wire, and Safety Cable from top of Tier A + B and feed through Chain. It is recommended to run Wires/Cable through every 3rd Link of Chain.
6. Slide Canopy Cover Plate over Wire, Cable, & Chain and allow it to rest face down on top of Tier A+ B.
7. Make electrical connection from Fixture Lead Wire to Structure Line Wire following all Local Codes and Procedures.
8. Attach loose end of Safety Cable to Welded Loop on Mounting Plate ensuring that connection is suitable for minimum 650lbs.
9. Tier A + B is ready to be hung. Connect loose end of Chain to Quick Link on center Loop of Mounting Plate.
10. Slide Canopy Cover Plate up Chain and over studs on Mounting Plate.
11. Attach Acorn Nuts to Studs and tighten until top of Canopy is flush to ceiling.
12. At bottom of Tier A + B locate slots and Connection Plates for 21" Connection Arms.
13. From Connection Plates, remove bottom-most 1/4-20 Acorn Nut, Hex Nut, & Bolt. Also remove 5/16 Acorn Nut and Bolt directly above. (FIG B)

FIG A


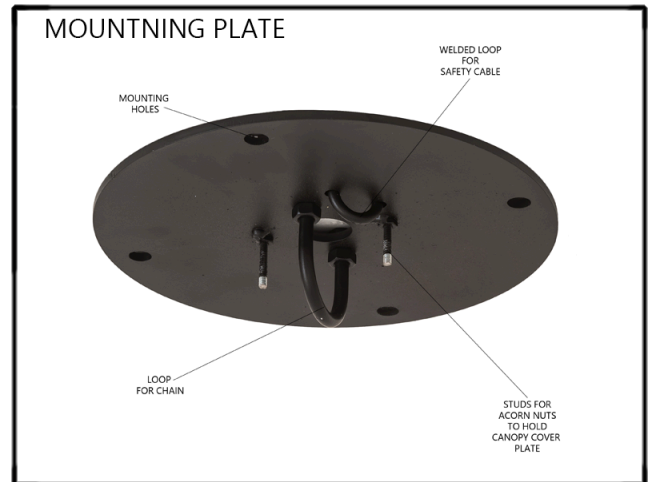


FIG B

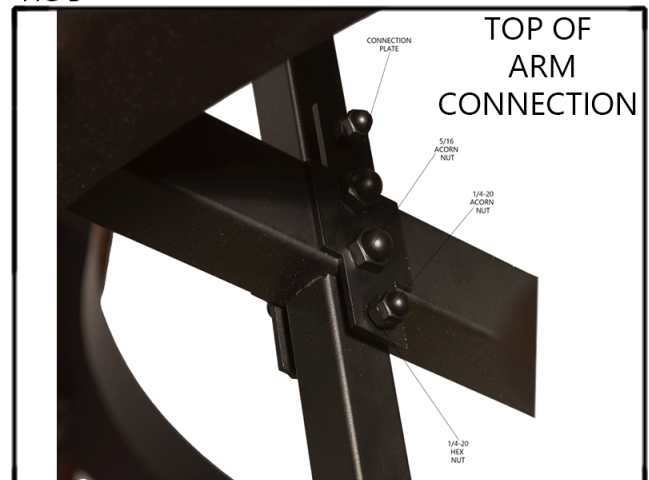

INSTALLATION INSTRUCTIONS

FOR ITEM 188860 CRETELLA 108 LT 6 TIER CHANDELIER

Meyda
CUSTOM LIGHTING

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Caution: Be sure power is off at the main breaker box prior to installation. Read all instructions in their entirety before beginning installation.

14. Insert top of Connection Arms into slots at Bottom of Tier A + B and secure with Bolts and Nuts. Ensure that Arms taper in towards center of Fixture.

5/16 Bolt and Acorn Nuts through top hole and 1/4-20 Bolt, Hex Nuts & Acorn Nuts in bottom hole. (FIG C)

15. Slot with Electrical Wire will need to have Wire run through Arm during connection.

16. Once all Arms have been secured to bottom of Tier A + B, connection to Tier C can be made.

17. Remove 5/16 Acorn Nuts and Bolts from Arm Connection locations at top of Tier C.

18. Raise Tier C into location and into bottoms of Connection Arms.

19. Ensure that Connection Arm with Electrical Wire lines up with Molex Receptacle at top of Tier C and make connection. Excess Wire should be fed into frame of Tier C.

20. Secure with 5/16 Bolts and Acorn Nuts. Ensure that extra attention is paid when feeding Bolt through Arm with Electrical Cable as to not pinch Cable. (FIG D & E)

21. Once Fixture has been successfully hung, free Sockets by removing plastic wrap.

22. Unscrew Uno Rings and slide off PVC Spacers.

23. Slide Shade over Socket and secure with PVC and then Uno Ring. Uno Ring should not be over tightened.

24. Insert 108 12Watt LED Bulbs(not included) into Sockets.

25. Hang Jack Chain between Shades by hooking ends of Jack Chain to Loops at top of Shade Chain.

26. Power on and ENJOY!!

FIG C

TOP OF ARM DETAIL



FIG D



FIG E

BOTTOM OF ARM CONNECTION

