

INSTALLATION INSTRUCTIONS

FOR ITEM 190568 CILINDRO 3 LT WALL SCONCE

Meyda
CUSTOM LIGHTING

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

FIXTURE COMPONENTS

1. 3LT FIXTURE HARDWARE
2. 6"W X 12"H CLEAR SEEDED GLASS CYLINDERS (QTY 3)
3. SOCKET COVERS (QTY 3)
4. TUBE OF SILICONE

Caution: Be sure power is off at the main breaker box prior to installation. Read all instructions in their entirety before beginning installation.

1. Carefully unpack all components and make certain that everything is accounted for.
2. Remove 3/8" Brass Balls from face of Fixture Hardware to release Universal Crossbar with Studs.
3. Attach Universal Crossbar to J-Box ensuring that Electrical Lead Wires remain accessible.
4. Make electrical connection from Lead Wires to Fixture Hardware following all Local Codes and Procedures.
5. Cylinder on rear of Fixture Hardware is removeable to allow for Conduit Notch to be aligned with Conduit at any angle. (FIG. A)
6. Slide Fixture Hardware onto Crossbar Studs and reattach Brass Balls. Screw until Fixture is flush against the wall and secure.
7. Place provided Socket Covers over Sockets.
8. Run liberal bead of provided Silicone onto inner edge of Boboches on Fixture Hardware. (FIG. B)
9. Set Glass Cylinders, exposed Glass side down, into Bobeches ensuring that Silicone is sufficiently contacting Glass Cylinder.
10. Install 3 Medium Base 60Watt Bulbs(not included).
11. Power on and ENJOY!!

FIG. A

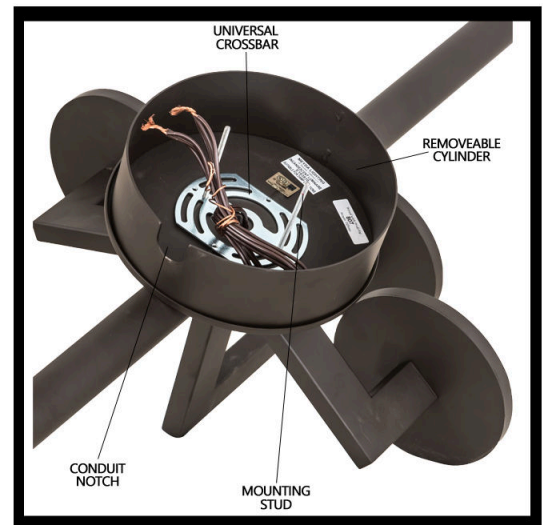


FIG. B

