ASSEMBLY INSTRUCTIONS FOR 19203 (SG376-32P-2-M20-2)

FIG.A


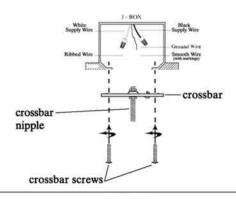


FIG.B

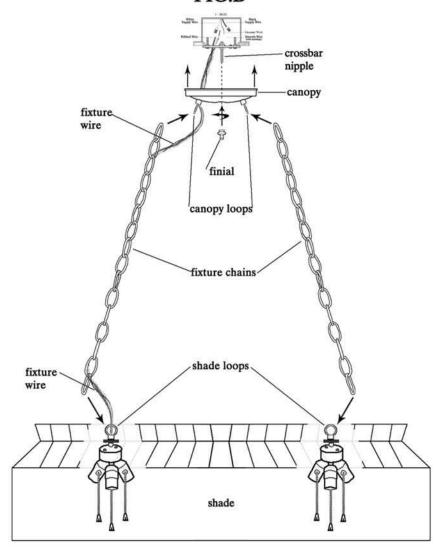

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED



DO NOT REMOVE CANOPY LOOPS OR REINFORCEMENT PLATE FROM CANOPY

-THIS IS A 2 PERSON JOB —

- 1. Attach crossbar to jbox. FIG.A
- Attach fixture chains to shade loops and canopy loops. FIG.B
- 3. Place fixture wire through fixture chain and canopy. FIG.B
- 4. Wire as per local electrical code.
- Place canopy (with fixture) onto crossbar nipple to ceiling, screw finial onto crossbar nipple and tighten to canopy. FIG.B



"A Commitment to Excellence in Lighting and Service"