

INSTALLATION INSTRUCTIONS

FOR ITEM 192699 KITZI BOX OBLONG PENDANT

Meyda
CUSTOM LIGHTING

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*


Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

FIXTURE COMPONENTS

A. 72"L KITZI BOX PENDANT BODY
B. 84" WELDED CHAIN
C. CANOPY ASSEMBLY

D. BOTTOM DIFFUSER PANEL (QTY 4)
E. ANTI-SWAY WALL MOUNT HARDWARE (QTY 4)
F. 180" ANTI-SWAY CHAIN (QTY 4)

Caution:
Fixture is OVERWEIGHT and not suitable to be hung from a standard J-BOX.
Be sure power is off at the main breaker box prior to installation.
Read all instructions in their entirety before beginning installation.

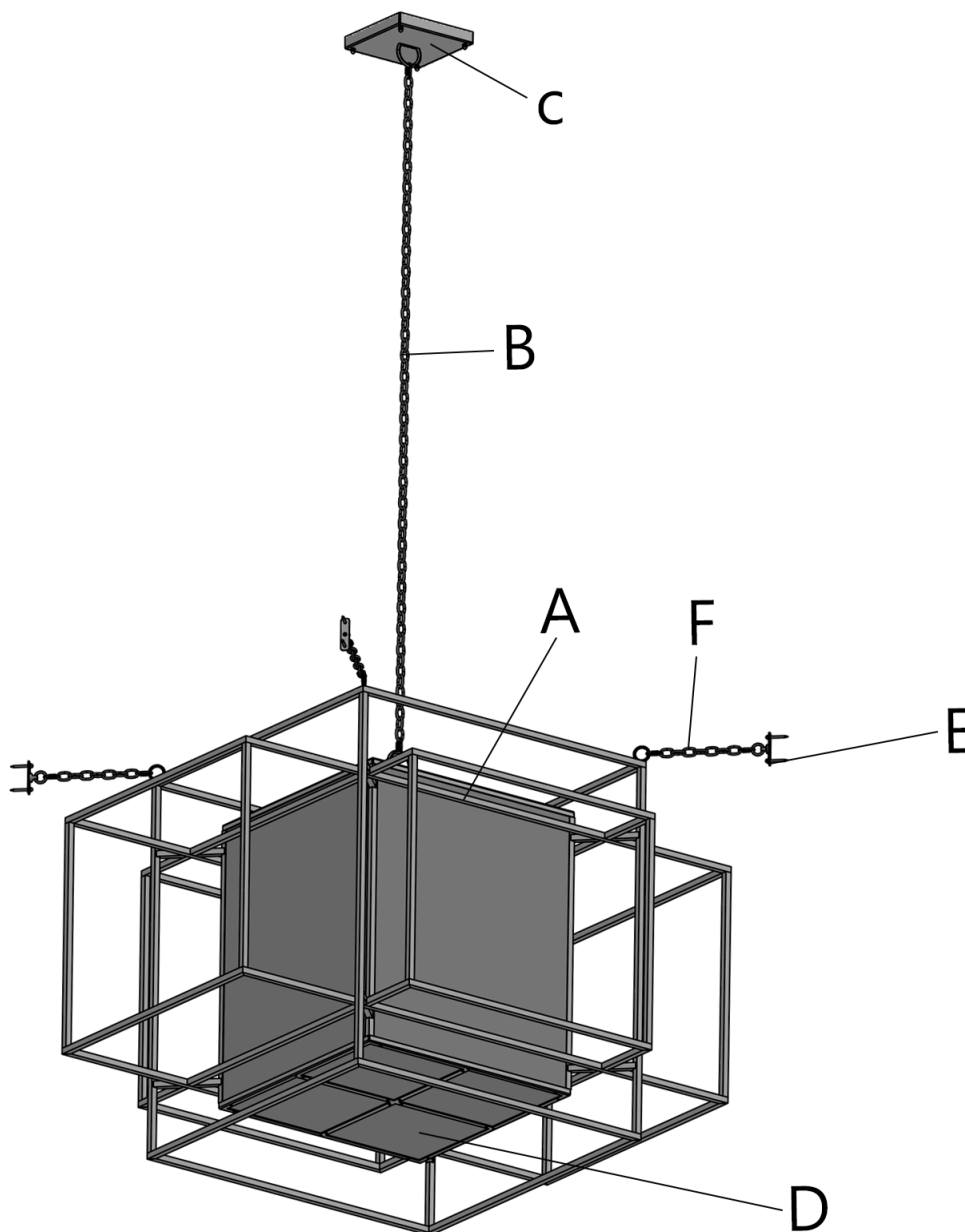

INSTALLATION INSTRUCTIONS

FOR ITEM 192699 KITZI BOX OBLONG PENDANT

Meyda
CUSTOM LIGHTING

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

FIXTURE COMPONENTS

A. 72" L KITZI BOX PENDANT BODY
B. 84" WELDED CHAIN
C. CANOPY ASSEMBLY

D. BOTTOM DIFFUSER PANEL (QTY 4)
E. ANTI-SWAY WALL MOUNT HARDWARE (QTY 4)
F. 180" ANTI-SWAY CHAIN (QTY 4)

Caution:

Fixture is OVERWEIGHT and not suitable to be hung from a standard J-BOX.
Be sure power is off at the main breaker box prior to installation.
Read all instructions in their entirety before beginning installation.

1. Carefully unpack all components and make certain that everything is accounted for.
2. Remove Acorn and Hex Nuts from Canopy Assembly to release Mounting Plate.
3. Reserve Nuts for later use.
3. Affix Mounting Plate to ceiling ensuring that connection is suitable for minimum 225lbs and that Electrical Supply Wires remain accessible.
4. Attach 84" Welded Chain to Quick Link at top of Pendant Body.
5. Connect loose end of Welded Chain to Quick Link on Canopy.
6. Unravel Fixture Lead Wires and Safety Cable and weave through every 3rd Link of Chain.
7. Feed Lead Wires and Safety Cable through slot in center of Canopy.
8. Make electrical connection from Fixture Lead Wires to Structure Supply Wires following all Local Codes and Procedures.
9. Secure Safety Cable to structure ensuring that connection is suitable for minimum 225lbs.
10. Hang Fixture by Sliding Canopy over Studs on Mounting Plate and secure with Hex and Acorn Nuts.
11. Install 32 GU24 Base 25Watt LED Bulbs into Sockets.
12. Slide Bottom Diffuser Panels into openings at bottom of Shade Box. Cut corners on Panels should be set into 4 outside corners of Shade Box.
13. Mount Anti-Sway Wall Hardware to desired locations using provided Lag Bolts.
14. Connect Anti-Sway Chains to Quick Links on corners of Pendant Body and secure Fixture by attaching loose ends of Anti-Sway Chains to Quick Links on Wall Mount Hardware.
15. Power on and ENJOY!!!

