


# ASSEMBLY INSTRUCTIONS FOR #21124 (TR833-14SC-1)

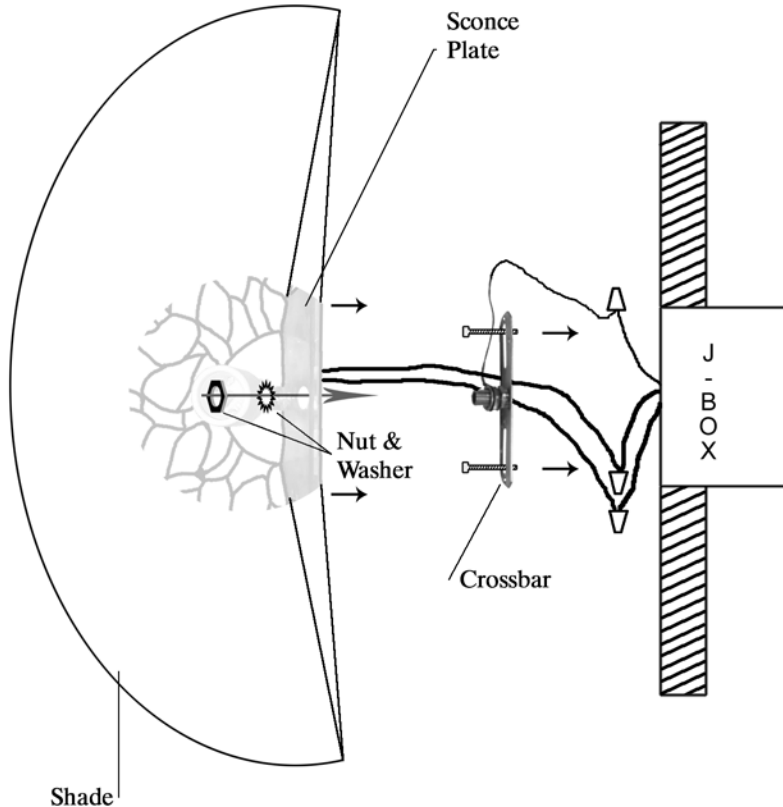

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Remove crossbar from sconce plate. (save nut & washer).
2. Attach crossbar to j-box using screws provided.
3. Wire sconce to j-box per local electrical code.
4. Attach sconce to crossbar using nut and washer that had been removed in Step 2.
5. Turn power on to j-box.



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)