


# ASSEMBLY INSTRUCTIONS FOR MORAVIAN STAR

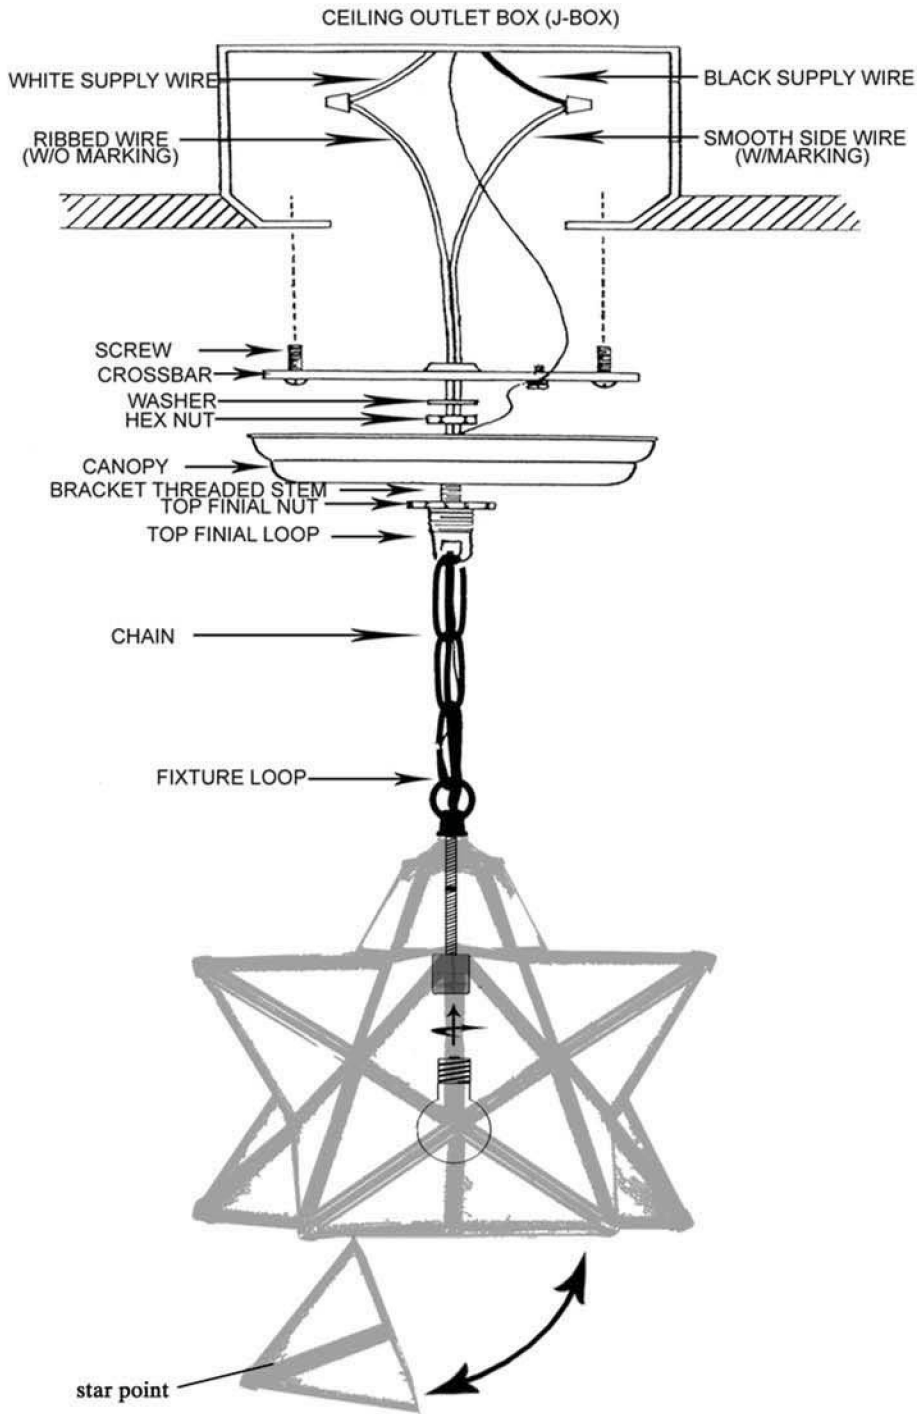

## IMPORTANT

**TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION**

**CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED**

1. Remove Finial Nut from Canopy to release Crossbar w/ Threaded Stem and Finial Loop.
2. Affix Crossbar to Junction Box ensuring that connection is suitable to hold a minimum of 25lbs. and that Electrical Supply Wires remain accessible.
3. Attach desired length of Chain to Fixture Loop.
4. Weave Lead Wires through every 4th Link of Chain.
5. Slide Finial Nut and Canopy over Chain and Lead Wire and allow them to rest on top of Shade.
6. Attach loose end of Chain to Finial Loop.
7. Feed Lead Wire through Finial Loop and, Following All Local Codes and Procedures, make connection to Supply Wires.
8. Slide Canopy up Chain to ceiling and secure with Finial Nut.
9. Remove Pin holding Star Point to access Socket.
10. Install 1-E26 60Watt Bulb(not included) into Socket.
11. Replace Star Point and Pin.
12. Power on and ENJOY!!!



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)