


ASSEMBLY INSTRUCTIONS FOR #21727 (TR839-12SC-1)

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

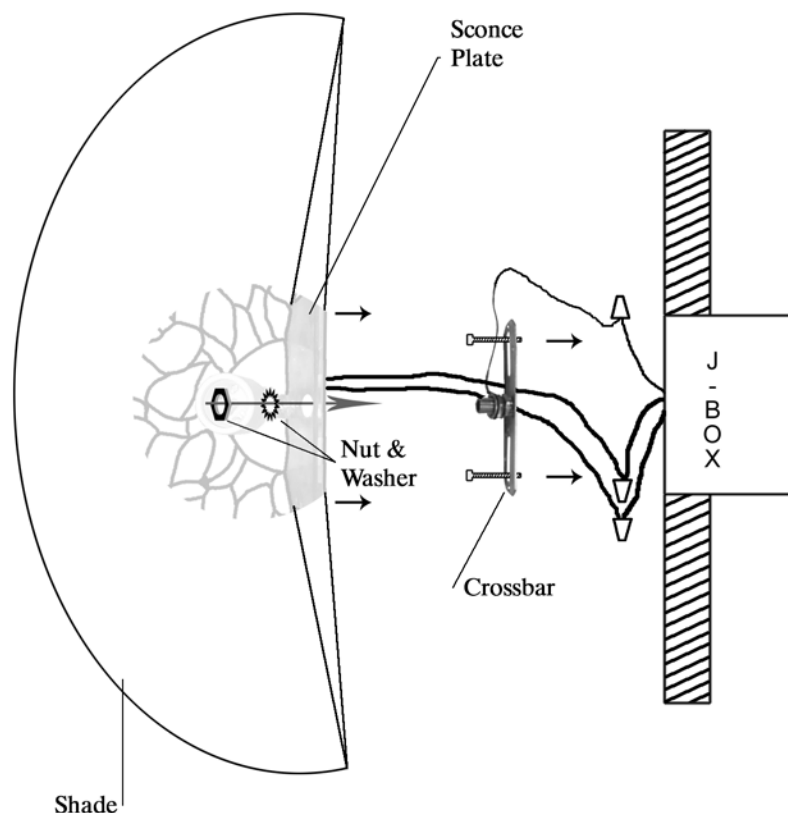

1. Remove crossbar from scone plate. (save nut & washer).
2. Attach crossbar to j-box using screws provided.
3. Wire scone to j-box per local electrical code.
4. Attach scone to crossbar using nut and washer that had been removed in Step 2.
5. Turn power on to j-box.



"A Commitment to Excellence in Lighting and Service"
 CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009
 MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET
 visit us on the web at www.meyda.com