


# ASSEMBLY INSTRUCTIONS FOR 22210 (6200-16-GL20M)

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

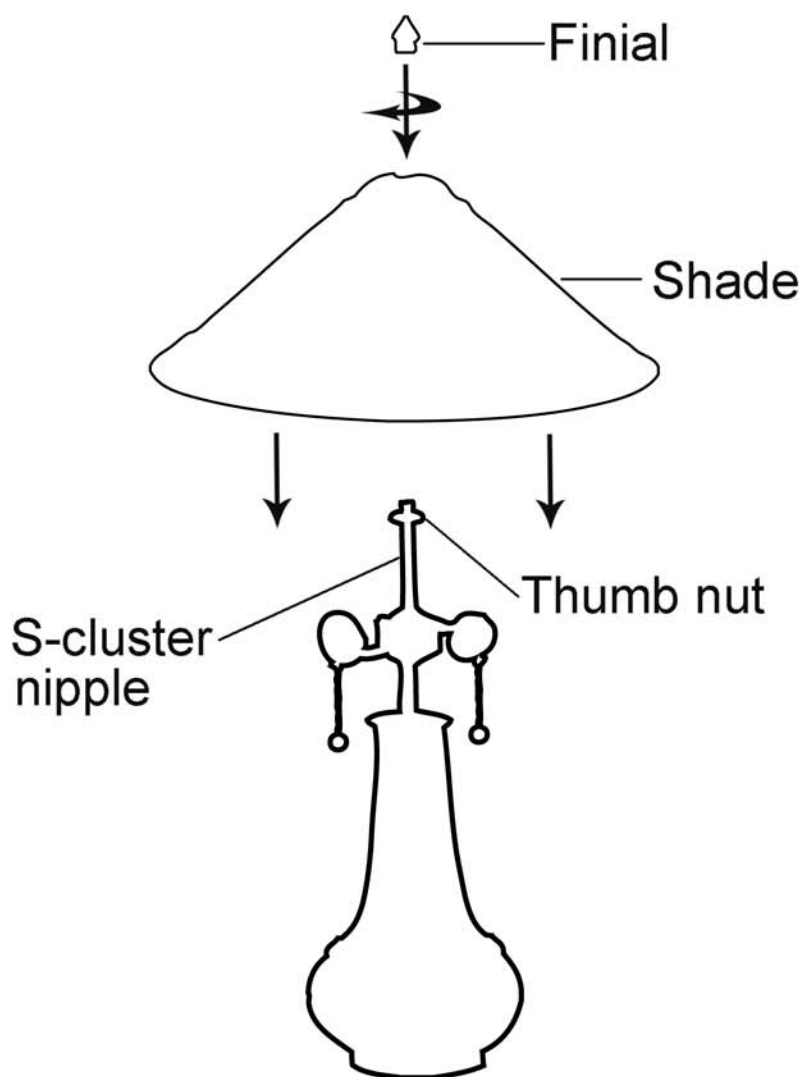

1. Screw thumb nut approx. 1" down on to S-cluster nipple.
2. Place shade w/ hole onto S-cluster nipple and seat to thumb nut.
3. Screw finial onto S-cluster nipple and tighten.
4. Place light bulbs into sockets, plug into wall outlet and enjoy.



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)