

ASSEMBLY INSTRUCTIONS FOR #24699 (6200-16-M45-27)

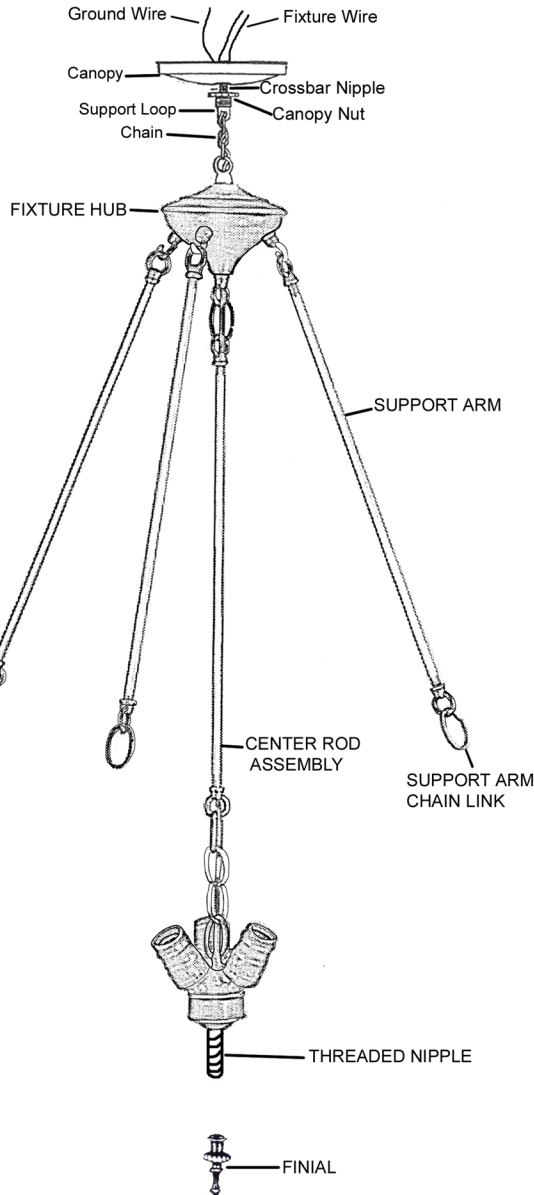


FIGURE A

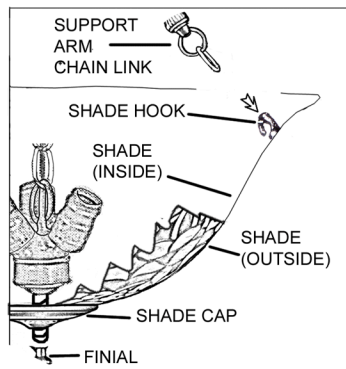


FIGURE B

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

Use these instructions for standard and custom M45 fixtures. The sizes listed here represent our standard models.

1. ASSEMBLE FIXTURE AS SHOWN IN FIGURE A:
2. Install assembled fixture FIGURE A. to ceiling. Pull Fixture wire with Ground wire through Crossbar Nipple carefully. (Follow procedure shown in ELECTRICAL CONNECTION instructions)
NOTE: This Fixture is custom fitted to each Shade. There will be fine adjustments you will be required to make.
3. Attach Support Arm Chain Link (3), to Shade Hook, (3) Fig. B. Place Center Rod Assembly (Threaded Nipple), through hole in center of Shade Cap, Fig. B. Attach Finial. NOTE: Weight of Shade must be on Center Rod Assembly Only. Arm Assembly are for balance of Shade only.
4. Screw Finial up or down to fine tune tension of Arm Assembly

ELECTRICAL CONNECTIONS:

1. Cut excess wire ABOVE Crossbar to 6 inches. Split the wire into 2 separate leads. Strip one inch of plastic insulator from the ends of each lead.
2. Connect the half of the wire with the ribbed surface to the white wire of the supply box. Connect the smooth half of the wire (the half with the markings) to the black wire of the supply box. Connect the bare copper Ground Wire to the green screw of the crossbar. Use UL listed wire connectors suitable for the size, type, and number of conductors. No loose strands or loose connections should be present. Secure wire connectors with electrical tape.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com