


ASSEMBLY INSTRUCTIONS FOR #26214 (M48-TR860-22-4)

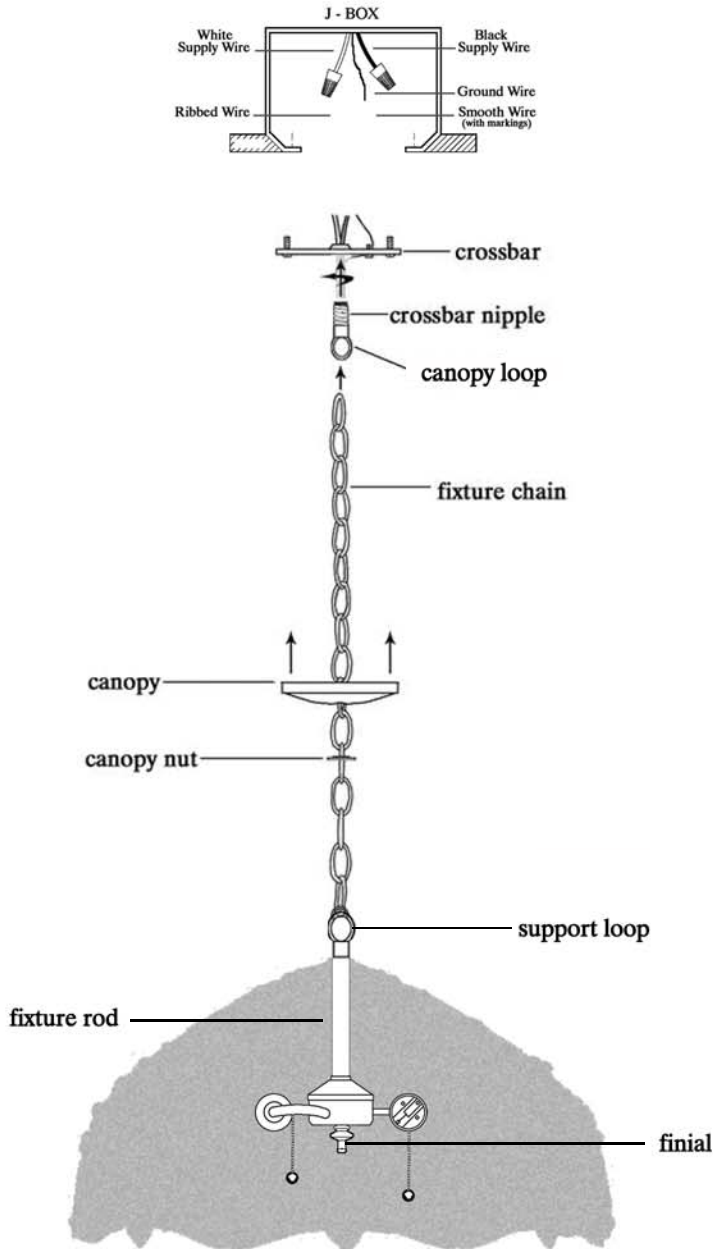

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Turn off power to J-Box
 2. Screw crossbar into J-Box
 3. Screw crossbar nipple into crossbar
 4. Determine length of chain needed, attach chain to fixture loop and support loop
 5. Screw canopy nut down and off canopy loop, let canopy nut and canopy slide down chain.
 6. Place fixture with wire through vase cap of shade, support loop, chain, canopy loop and crossbar.
 7. Wire as per local electrical code.
 8. Screw threaded nipple into bottom of canopy loop.
 9. Place canopy to ceiling and secure with canopy nut.
 10. Screw finial onto threaded nipple and tighten.
- **CAUTION: Do not over tighten, shade will break.****
11. Turn on power to J-Box.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com