


ASSEMBLY INSTRUCTIONS FOR #26310 (SX3-SH16)

IMPORTANT

TURN OFF THE POWER AT THE MAIN
FUSE OR CIRCUIT BREAKER BOX
BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL
PARTS BEFORE ASSEMBLY. BULBS ARE
NOT INCLUDED

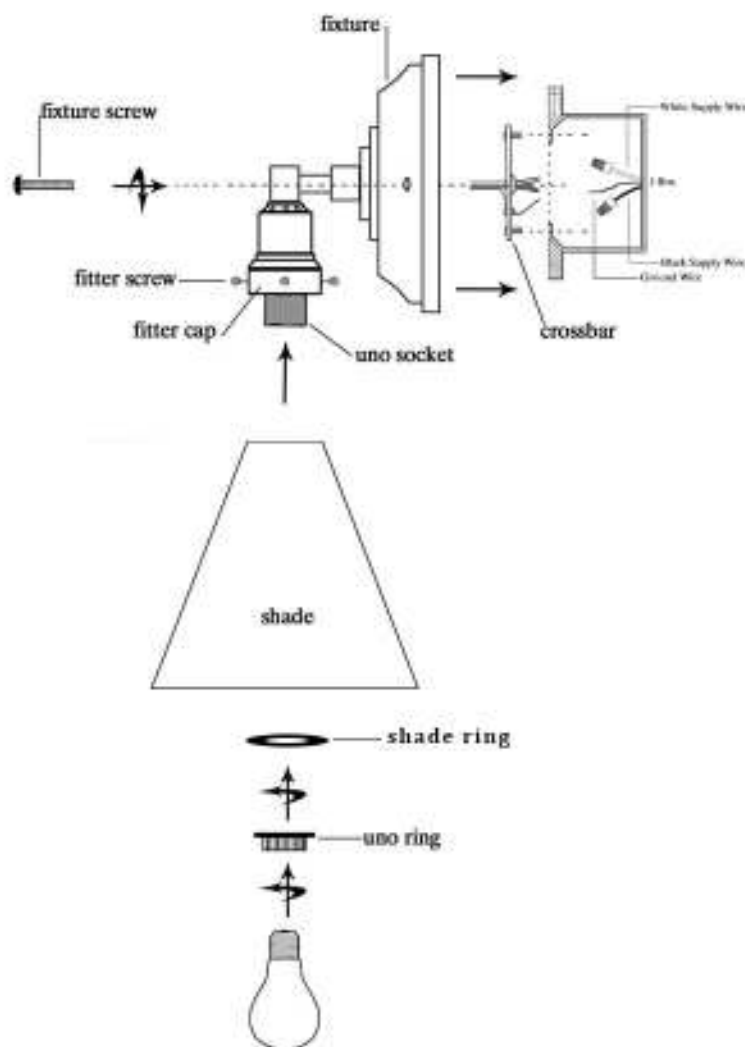

1. Screw crossbar to j-box.
2. Wire as per local electrical code.
3. Screw fixture to crossbar with fixture screws.
4. Loosen fitter screws (Do Not Remove) so shade ring will fit into fitter cap.
5. Place shade into fitter ring.
6. Screw uno ring onto uno socket and tighten to shade.
7. Screw fitter screw in and tighten to shade ring.
5. Place shade into fitter cap.
6. Place into the shade the shade ring, hold there till you screw the uno ring onto the uno socket. Tighten to shade.
7. Screw fitter screws into fitter. These screws are for decoration and are not meant to hold the shade.
8. Bulb your sconce, (bulbs provided by others). Power on, enjoy your new sconce!



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com