

ASSEMBLY INSTRUCTIONS FOR #26346 (Q2-30B-1080-QISSF-20-100)

FIG.A

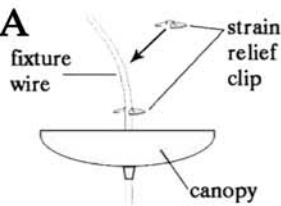


FIG.B

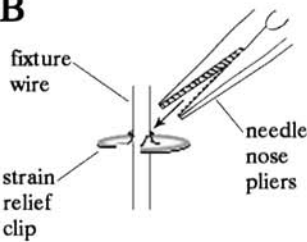


FIG.C

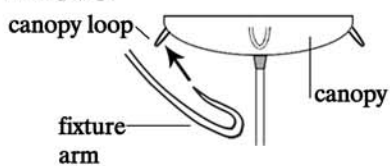


FIG.D


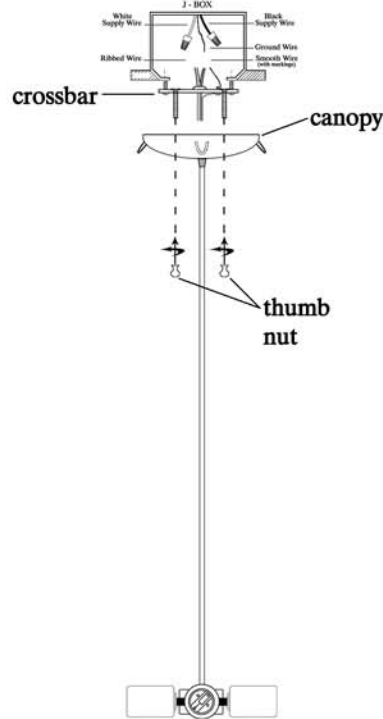


FIG.E

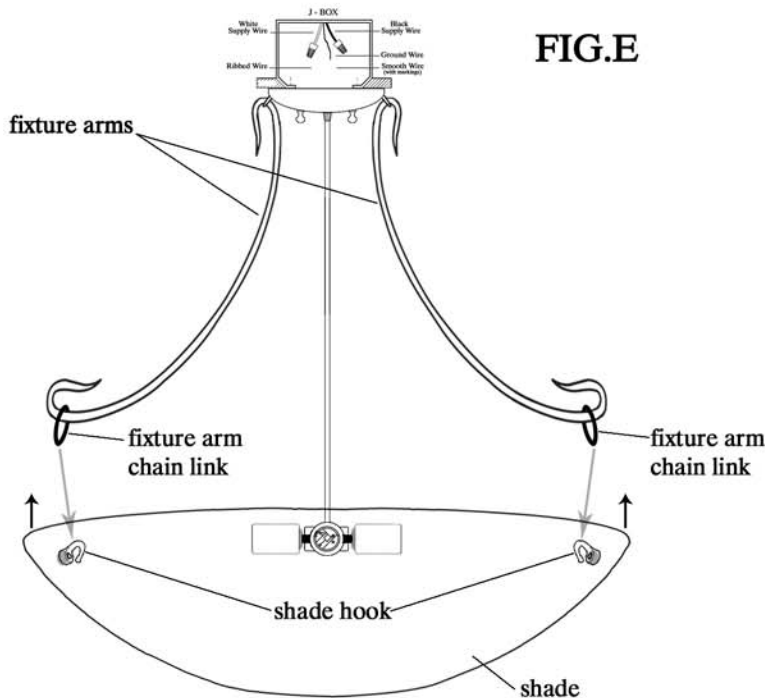

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Thread fixture wire through canopy.
2. Add 1" to pre determined fixture wire length and place strain relief clip onto wire at this location. FIG.A
(Be Sure To Leave A Minimum Of 6" Of Wire Above This Location For Attachment To Jbox Wires).
3. Using needle nose pliers crimp strain relief clip onto fixture wire. FIG.B
VERY IMPORTANT: WHEN ADJUSTING FIXTURE WIRE LENGTH BE SURE TO LEAVE A MINIMUM OF 4" BETWEEN LIGHT BULBS AND SHADE INTERIOR.
1. Refer to FIG.C. Place fixture arms through canopy loop as shown. FIG.C
2. Screw crossbar to j-box. FIG.D
3. Wire as per local electrical code.
4. Place canopy with fixture arms up and onto canopy screws and attach with thumb nuts. FIG.D
5. Place chain links onto fixture arms as shown in FIG.E
6. Place fixture arm chain links onto shade hooks located on inside of shade. FIG.E



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com