


ASSEMBLY INSTRUCTIONS FOR #26618 (FQ14-TR860-14D-5)

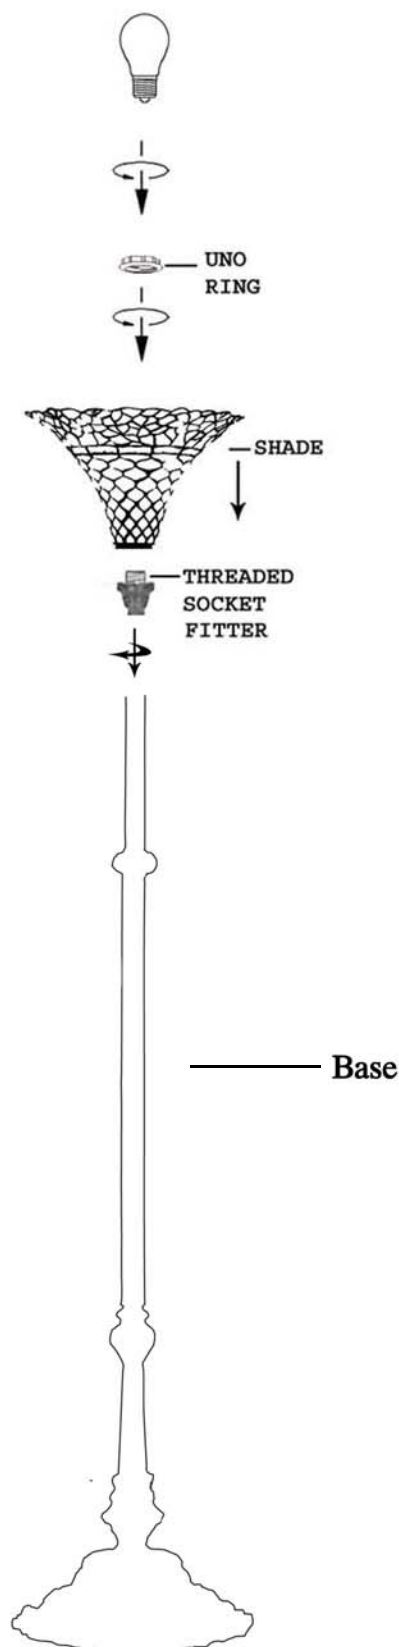

IMPORTANT

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Screw threaded socket fitter into base.
 2. Place shade into threaded socket fitter.
 3. Screw Uno ring onto threaded socket.
 - * To tighten shade properly, turn shade and uno ring clockwise simultaneously*
 4. Screw light bulb into socket.
 5. Plug fixture into wall outlet and ENJOY!
- CAUTION: Do NOT over tighten!**



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com