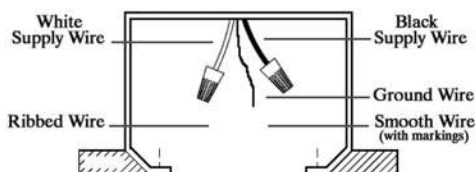
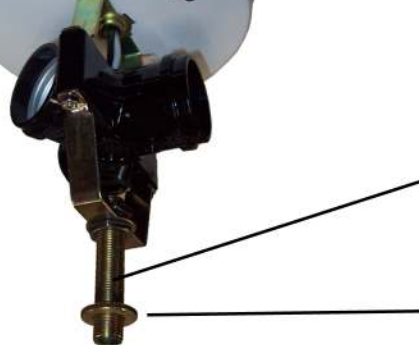


ASSEMBLY INSTRUCTIONS FOR # 26800

— **A**— **B**— **C**— **D**— **E****F**— **G**

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Screw swivel crossbar to your J-box (A) or ceiling. Two screws should point down from crossbar (B) (screw heads should point towards fixture).
- 2.) Bring hardware & canopy (C) to crossbar, Connect all electrical wires as per local codes.
- 3.) Secure canopy hardware (C) to your crossbar (B) so that it is flush with ceiling. Use the two screws pointing down to do so.
- 4.) Slide shade (F) onto threaded nipple (D), and secure in place with finial (G). You may need to adjust the knurled nut (E) to grip shade tight.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com