


# ASSEMBLY INSTRUCTIONS FOR #27561 (FK13-TR546-20-1)

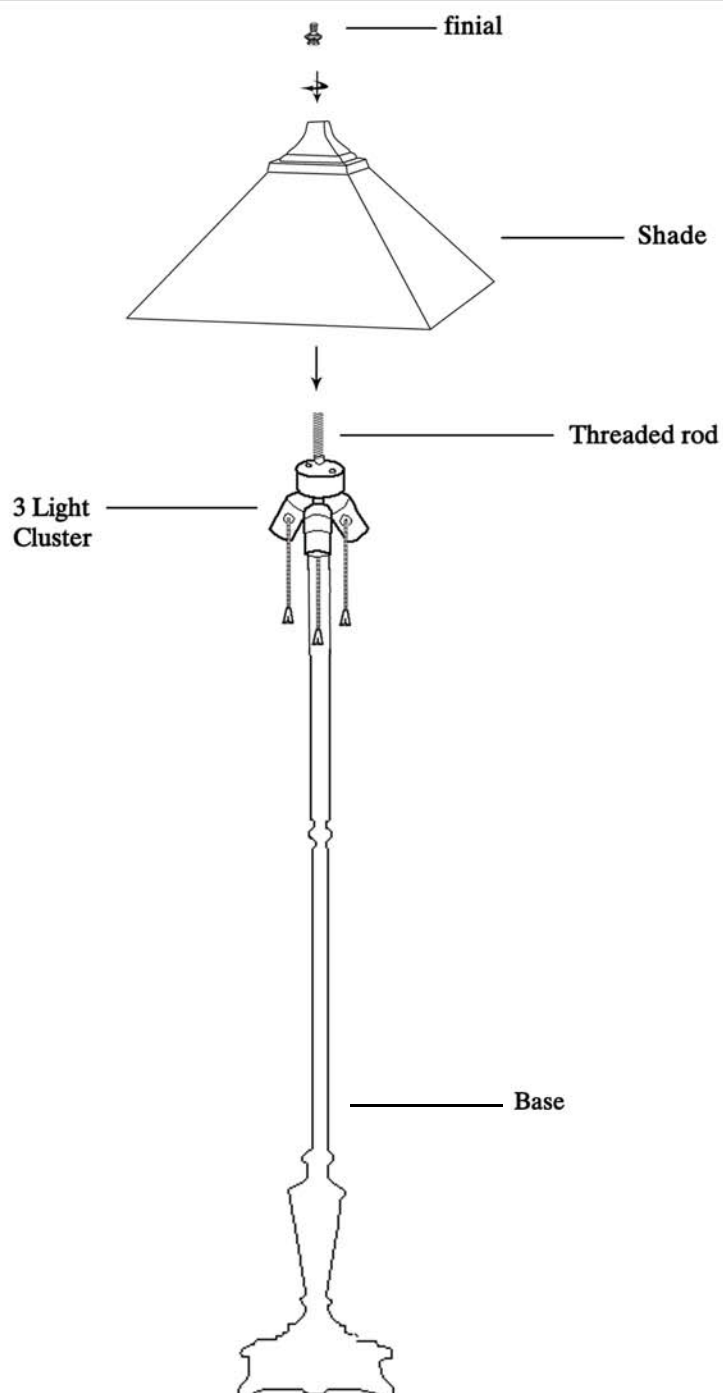

## IMPORTANT

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Screw 3 light cluster onto base.
2. Place shade onto threaded rod.
3. Screw finial onto threaded rod and tighten to shade.
4. Screw light bulbs into sockets.
5. Plug light into outlet and enjoy!



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)