

CUSTOMER NAME:

CUSTOMER #:




## CUSTOMER PROPOSAL/CUT SHEET

*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

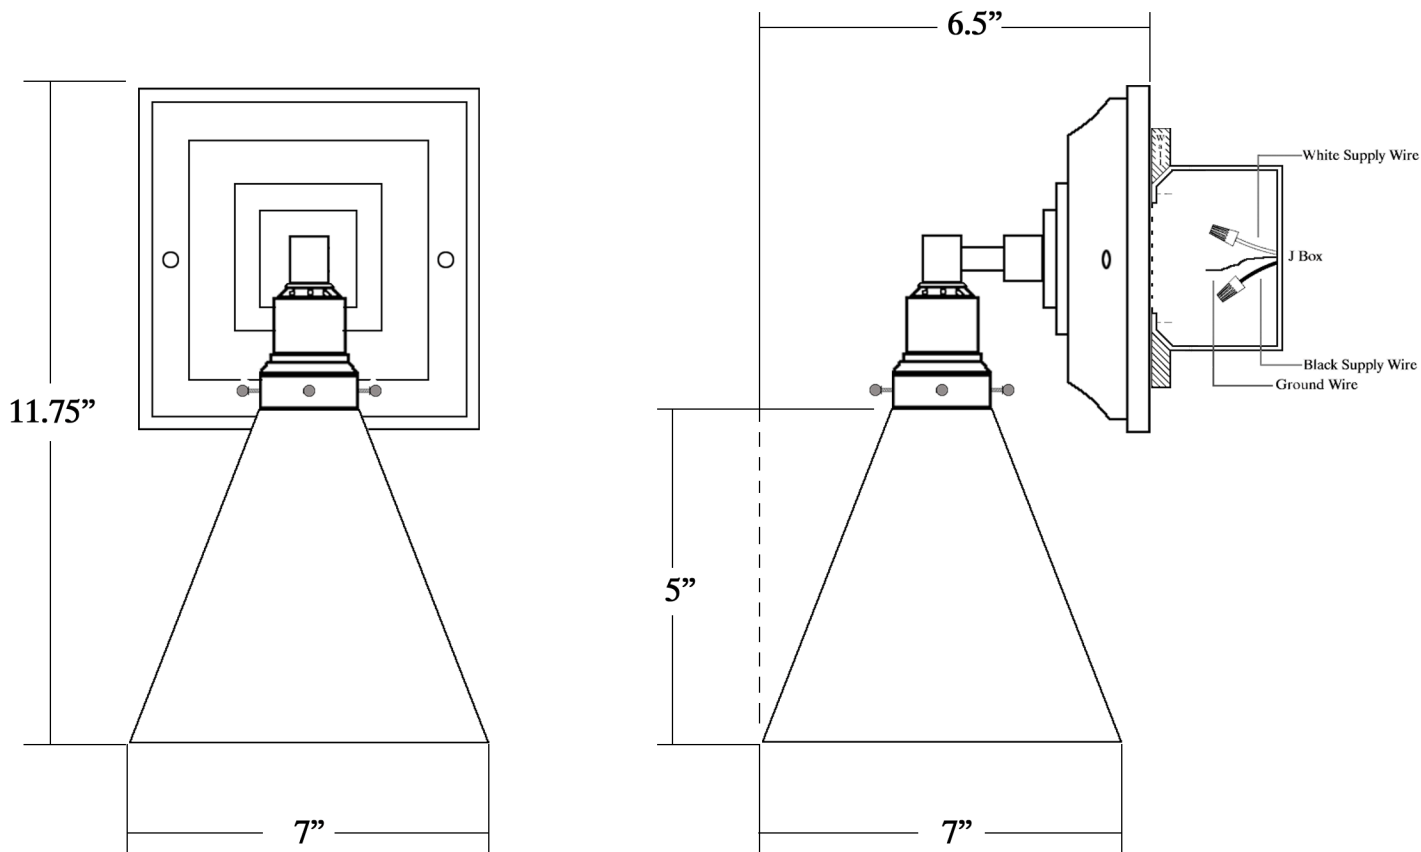visit us on the web at [www.meyda.com](http://www.meyda.com)

© MEYDA TIFFANY, INC. © DESIGN COPYRIGHT, MEYDA TIFFANY, INC. ALL RIGHTS RESERVED, NO UNAUTHORIZED DUPLICATION



ITEM# <b>27883</b>	BULB# <b>1</b>	LOCATION
DESIGN# <b>SX1-6260-07R</b>	TYPE <b>MEDIUM BASE</b>	
FIXTURE TYPE <b>WALL SCONCE</b>	WATT <b>100</b>	DIMENSIONS/NOTES
LENS/ GLASS COLOR <b>AMBER MICA</b>	VOLTAGE <b>120</b>	
FINISH <b>ANTIQUE MAHOGANY</b>	MATERIAL <b>METAL/MICA</b>	WEIGHT


# ASSEMBLY INSTRUCTIONS FOR 1111 (SG111-11-1-M111)

## IMPORTANT

TURN OFF THE POWER AT THE MAIN  
FUSE OR CIRCUIT BREAKER BOX  
BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL  
PARTS BEFORE ASSEMBLY. BULBS ARE  
NOT INCLUDED

1. Screw crossbar to j-box.
2. Wire as per local electrical code.
3. Screw fixture to crossbar with fixture screws.
4. Loosen fitter screws ( Do Not Remove) so shade ring will fit into fitter cap.
5. Place shade into fitter ring.
6. Screw uno ring onto uno socket and tighten to shade.
7. Screw fitter screw in and tighten to shade ring.

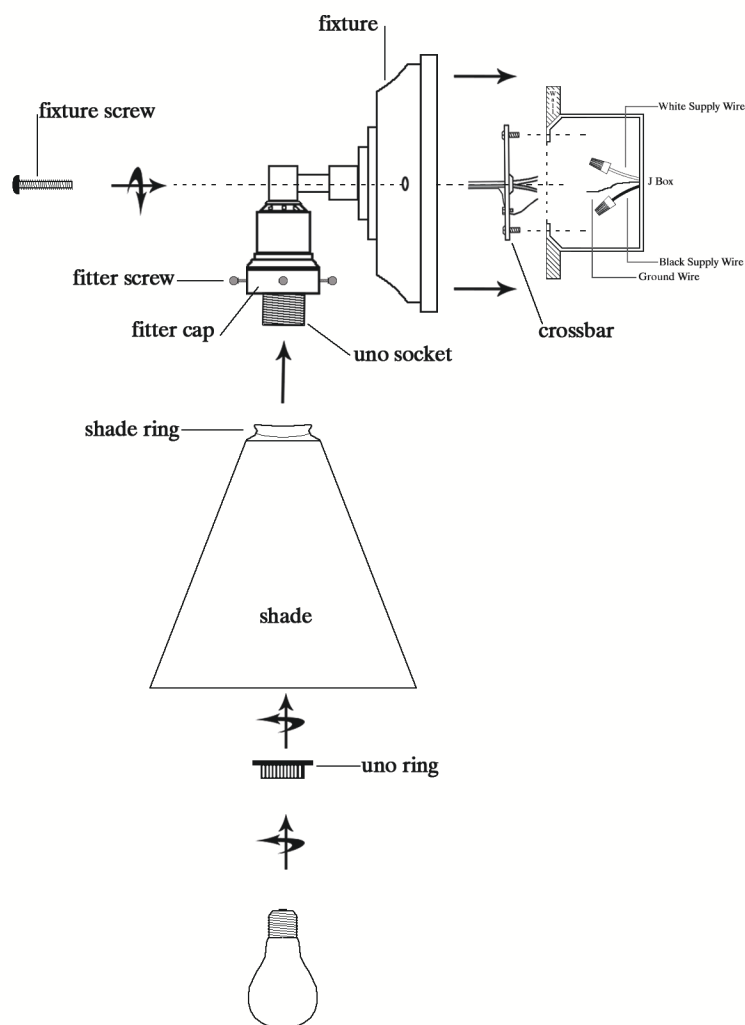

*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)