FOR ITEM 280335



CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL

INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.


FIXTURE COMPONENTS

- 1. SHADES X4
- 2. CANOPY W/ CROSSBAR
- AND COLLAR 3. CHAIN WITH QUICK LINK
- 4. FRAME

Caution:

Be sure power is off at the main breaker box prior to installation. Read all instructions in their entirety before beginning installation.

- 1. Carefully unpack all components and make certain that everything is on hand.
- 2. Remove the canopy by unscrewing the collar from the loop. (put both aside for later)
- 3. Using customer supplied hardware, affix the crossbar to the J-box ensuring the connection is suitable for a minimum of 50 lbs and that electrical supply wires remain accessible.
- 4. Connect the quick link to the loop attached to the crossbar with desired amount of chain. (MAX 12" of chain)
- 5. Slide canopy and collar through the chain, unravel the wire at the top of the frame and lift the frame, hooking it to the chain. (canopy and collar should be loose on the chain so wire is accessible)
- 6. Weave wire through the chain in 4 link intervals, through the canopy and collar, and into the loop attached to the crossbar.
- 7. Following all local codes and procedures, make electrical connection from supply wires to lead wires.
- 8. Lift canopy and collar up to the ceiling, securing them by twisting the collar back onto the loop.
- 9. Remove thumb screws from the 3 outer caps and the 3 outer acorn nuts from the inner plate. (save for later)
- 10. Install 3X 60WATT E26 T10 Bulbs (not included) & 1X 60WATT E26 A19 Bulb (not included) into sockets.
- 11. One at a time, lift the small shades up to the outer caps and secure by screwing in the 3 thumb screws. (repeat 3 times)
- 12. Lift the large shade up, lining up the screws on the plate for the shade to sit on.
- 13. Rescrew Acorn nuts on top of shade to secure it in place.
- 14. Power on and ENJOY!!!

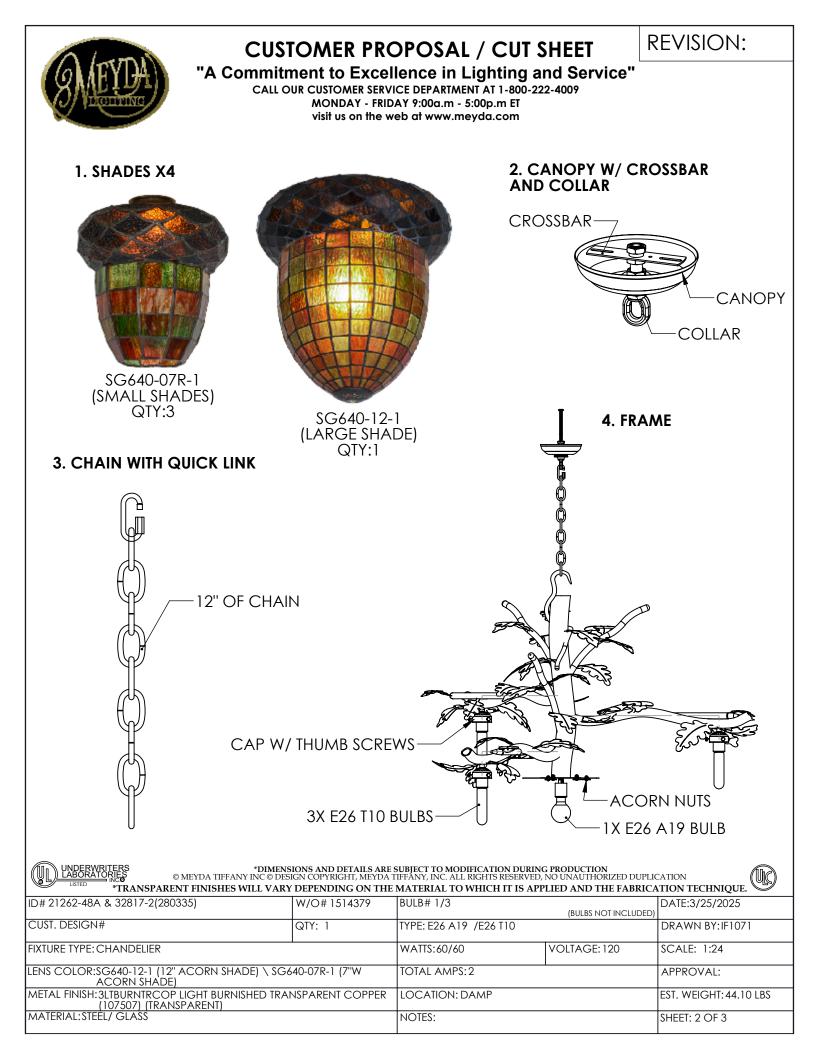

[
	CUSTOMER PR	OPOSAL / CUT	SHEET	REVISION:
"A Commitment to Excellence in Lighting and Service" CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009 MONDAY - FRIDAY 9:00a.m - 5:00p.m ET visit us on the web at www.meyda.com				
	OVERALL	Ĩ		
		(d)		
	\sim		-	
	Z	ह्य	D	
	45	A LESS		
ES 8 8				
E E E				
		Sign		
			T	
UNDERWRITERS LABORATORIES © MEYDA TIFFARY INC © DESIGN COPYRIGHT, MEYDA TIFFARY, INC. ALL RIGHTS RESERVED, NO UNAUTHORIZED DUPLICATION				
*TRANSPARENT ID# 21262-48A & 32817-2(28033)	FINISHES WILL VARY DEPENDING ON THE5)W/O# 1514379	E MATERIAL TO WHICH IT IS A BULB# 1/3		DATE:3/25/2025
CUST. DESIGN#	QTY: 1	TYPE: E26 A19 /E26 T10	(BULBS NOT INCLUDE	DRAWN BY:IF1071
FIXTURE TYPE: CHANDELIER		WATTS:60/60	VOLTAGE: 120	SCALE: 1:8
LENS COLOR:SG640-12-1 (12" ACORN SHADE) \ SG640-07R-1 (7"W ACORN SHADE)		TOTAL AMPS: 2	1	APPROVAL:
METAL FINISH'31 TRURNITROOP LIGHT BURNISHED TRANSPARENT COPPER		LOCATION: DAMP		EST. WEIGHT: 44.10 LBS
(107507) (TRANSPARENT) MATERIAL:STEEL/ GLASS		NOTES:		SHEET: 3 OF 3
		1		