
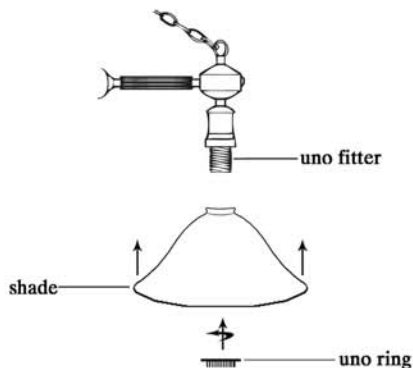


# ASSEMBLY INSTRUCTIONS FOR #28173 M54/3-12", M54/3-16", M54/3-18"

0604-03/11/08

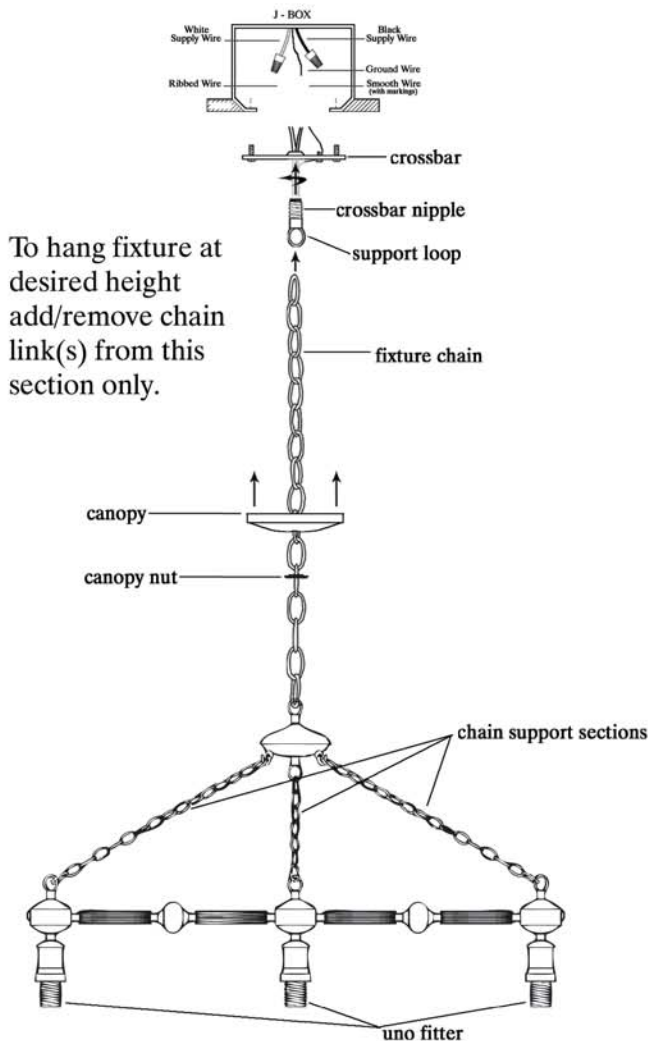

## IMPORTANT

TURN OFF THE POWER AT THE MAIN  
FUSE OR CIRCUIT BREAKER BOX  
BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL  
PARTS BEFORE ASSEMBLY. BULBS ARE  
NOT INCLUDED

CAUTION: Do not add/remove chain  
link(s) from chain support sections as  
this would cause fixture to hang improperly

1. Attach crossbar to J-Box. Screw crossbar nipple into crossbar. Screw support loop onto crossbar nipple.
2. Place canopy nut onto fixture chain, place canopy onto fixture chain, attach fixture chain to support loop.
3. Place electrical wire up through canopy nut, canopy, support loop & crossbar nipple.
4. Wire as per local electrical code.
5. Slide canopy up to ceiling, slide canopy nut up and screw onto crossbar nipple, tighten to canopy.
6. Place shade on to uno fitter, screw uno ring onto uno fitter and tighten to shade.
7. Repeat step 6 for remaining shades.



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)