

# INSTALLATION INSTRUCTIONS

FOR ITEM 284616

*Meyda*  
CUSTOM LIGHTING

**CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE.** We recommend installation by a licensed electrician.

This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.\*

**Caution:** Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

## FIXTURE COMPONENTS


1. CANOPY WITH LAMPING AND CHAIN ATTACHED
2. SHADE

### **Caution:**

***Be sure power is off at the main breaker box prior to installation.  
Read all instructions in their entirety before beginning installation.***

1. Carefully unpack all components and make certain that everything is on hand.
2. Unscrew Acorn Nuts from the bottom of the Canopy to release the Mounting Plate.
3. Using Customer Supplied Hardware, affix the Mounting Plate directly to the J-box ensuring connection is suitable for a minimum of 30 LBS and that electrical supply wires remain accessible.
4. Unravel wire from the top of the Canopy.
5. While lifting the Canopy up and following all local codes and procedures, make electrical wire connections from supply wires to fixture lead wires.
6. Connect the Canopy back to the Mounting Plate using the Acorn Nuts from before.
7. Lift the Shade up connecting it to the Chain hanging from the Canopy using the Quick Links attached.
8. Install 3x 40WATT E26 A19 Bulbs (not included) into sockets.
9. Power on and ENJOY!!!

## 1. CANOPY WITH LAMPING AND CHAIN ATTACHED

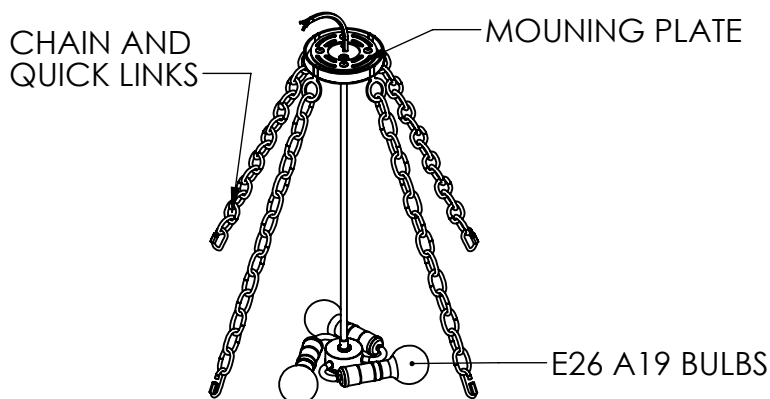

## OVERALL

