


# ASSEMBLY INSTRUCTIONS FOR 28511 ( M38 QB260-19LR )

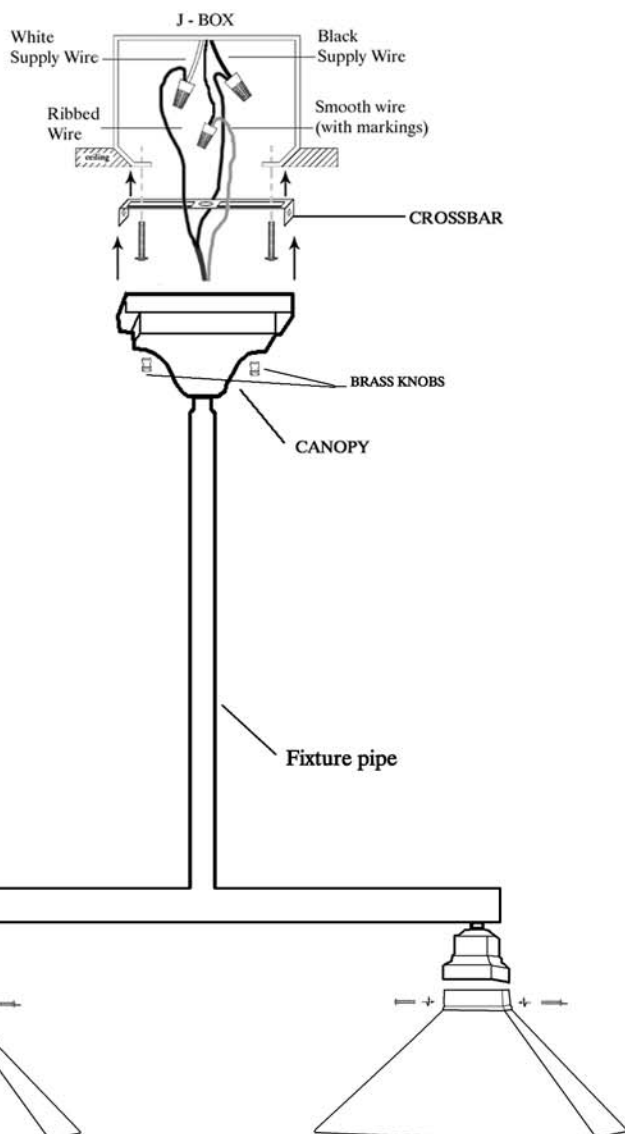

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

\*\*\* This is a two person job.\*\*\*

1. Attach crossbar to J-Box.
2. Attach fixture wires to J-Box wires as shown. (wire as per local electrical code)
3. Attach fixture to J-Box using brass knobs.
4. Remove uno-ring from fitter socket, loosen (4) set screws from fitter hub.
5. Place shade up and over fitter socket.
6. Screw uno-ring onto fitter socket and tighten to shade.
7. Tighten fitter set screws into shade ring.



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)