


ASSEMBLY INSTRUCTIONS FOR #30222 (QT2-48-)

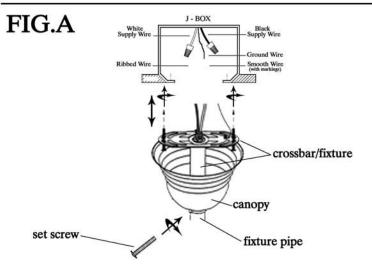

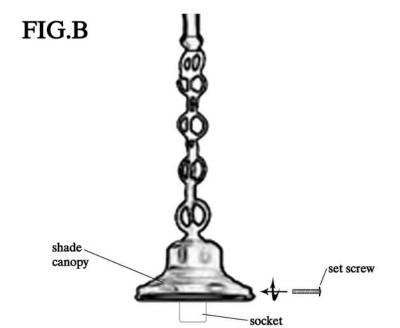

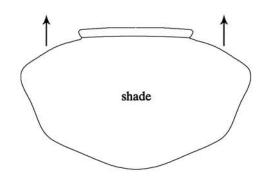

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1. Loosen set screw and slide canopy down fixture pipe. FIG.A
- 2. Attach crossbar/fixture to j box. FIG.A
- 3. Wire as per local electrical code
- 4. Slide canopy up to ceiling and secure with set screw. FIG.A
- 5. Place light bulb into socket. FIG.B
- 6. Place shade up and Into shade canopy, secure with set screw. FIG.B (Do not over tighten)



"A Commitment to Excellence in Lighting and Service"