
ASSEMBLY INSTRUCTIONS FOR #30280 (FB13-QB575-21F)

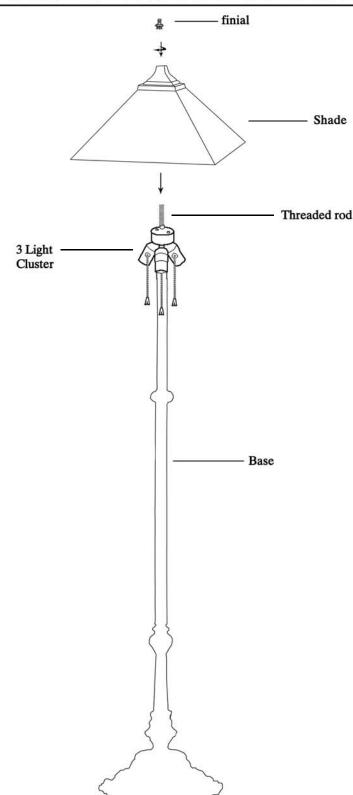

IMPORTANT

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1. Screw 3 light cluster onto base.
- 2. Place shade onto threaded rod.
- 3. Screw finial onto threaded rod and tighten to shade.
- 4. Screw light bulbs into sockets.
- 5. Plug light into outlet and enjoy!



"A Commitment to Excellence in Lighting and Service"