


ASSEMBLY INSTRUCTIONS FOR #31112 (TR860-22-4-EE19)

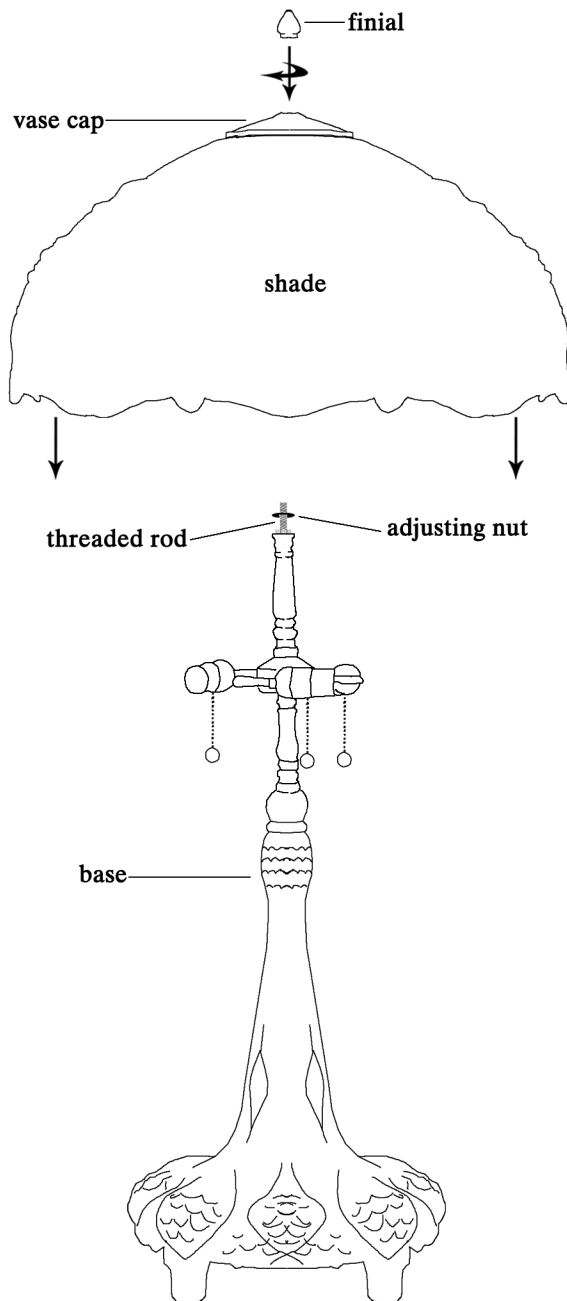

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Use height adjusting nut to adjust the height of the shade.
2. Place shade onto threaded rod and seat to adjusting nut.
3. Screw finial onto threaded rod and tighten to vase cap.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com

