


# ASSEMBLY INSTRUCTIONS FOR #31230 (SX2-MS202-07R-2)

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Screw crossbar to j-box.
2. Wire as per local electrical code.
3. Screw fixture to crossbar with fixture screws.
4. Loosen fitter screws ( Do Not Remove ) so shade ring will fit into fitter cap.
5. Place shade into fitter ring.
6. Screw uno ring onto uno socket and tighten to shade.
7. Screw fitter screw in and tighten to shade ring.

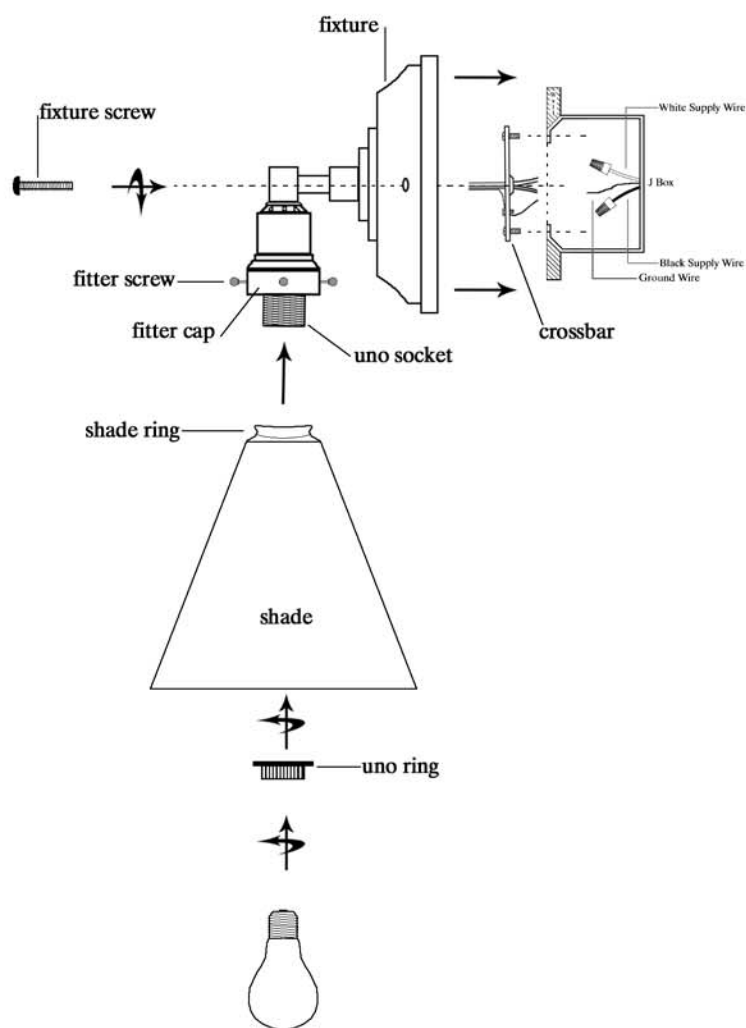

*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)