


# ASSEMBLY INSTRUCTIONS FOR # 31975(FA19)

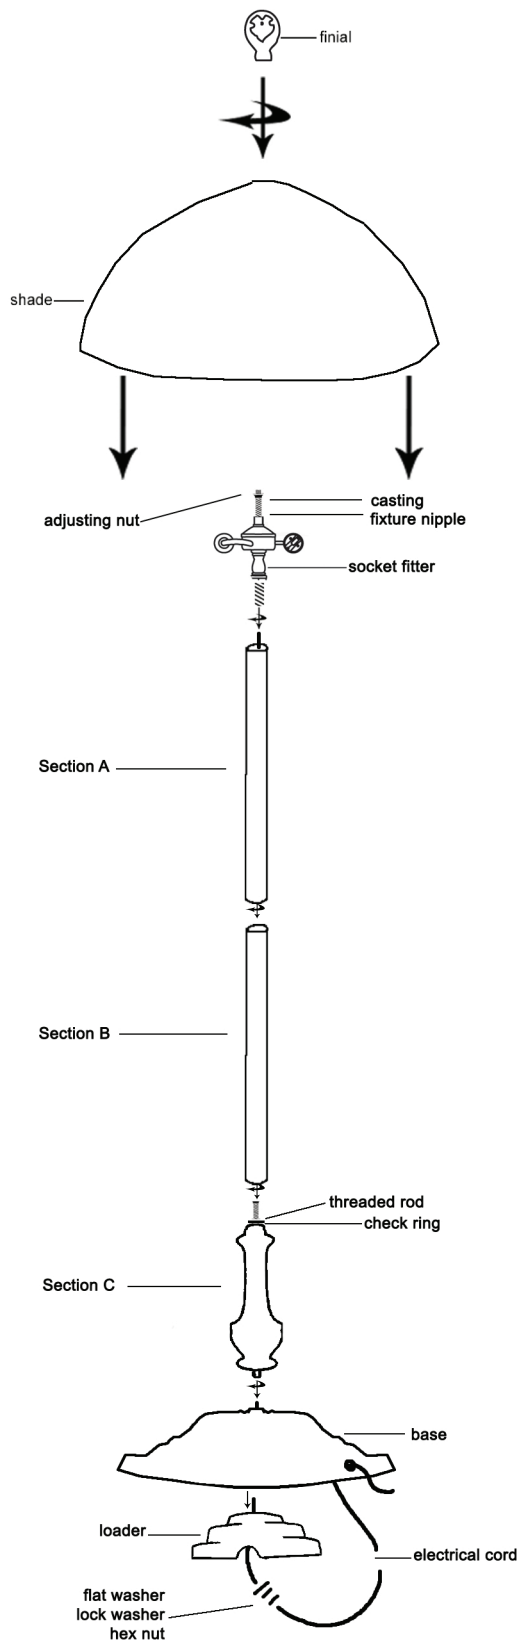

## IMPORTANT

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

Tools required: Adjustable wrench

1. Screw threaded socket fitter into pipe section A.
2. Screw pipe section A into pipe section B.
3. For section C threaded rod make sure the .75" of the threaded rod is exposed above the check ring.
4. Place threaded rod with check ring into section C casting.
5. Place section C casting with threaded rod into base section.
6. Slide loader up and onto section C threaded rod.
7. Place flat washer and lock washer onto section C thread rod.
8. Screw hex nut onto section C thread rod and tighten.
9. Screw completed unit (section A and section B with lighting fixture) onto section C and tighten.
10. Screw fixture nipple with casting into top of socket fitter, make sure adjusting nut is screwed tight to casting.
11. Place shade on fixture nipple.
12. Screw finial tight.

(Caution: Do Not Over Tighten)



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)