

ASSEMBLY INSTRUCTIONS FOR 32738 (TR546-08R-1-JUC1D)

IMPORTANT


TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Screw candelabra bulb into socket.

2. Unscrew thumb screw (3) from shade fitter. *Do not remove thumb screw (3) from shade fitter, loosen thumb screw (3) enough to allow shade ring to seat into shade fitter.

3. Seat shade into shade fitter, tighten thumb screw (3) to secure shade into shade fitter.

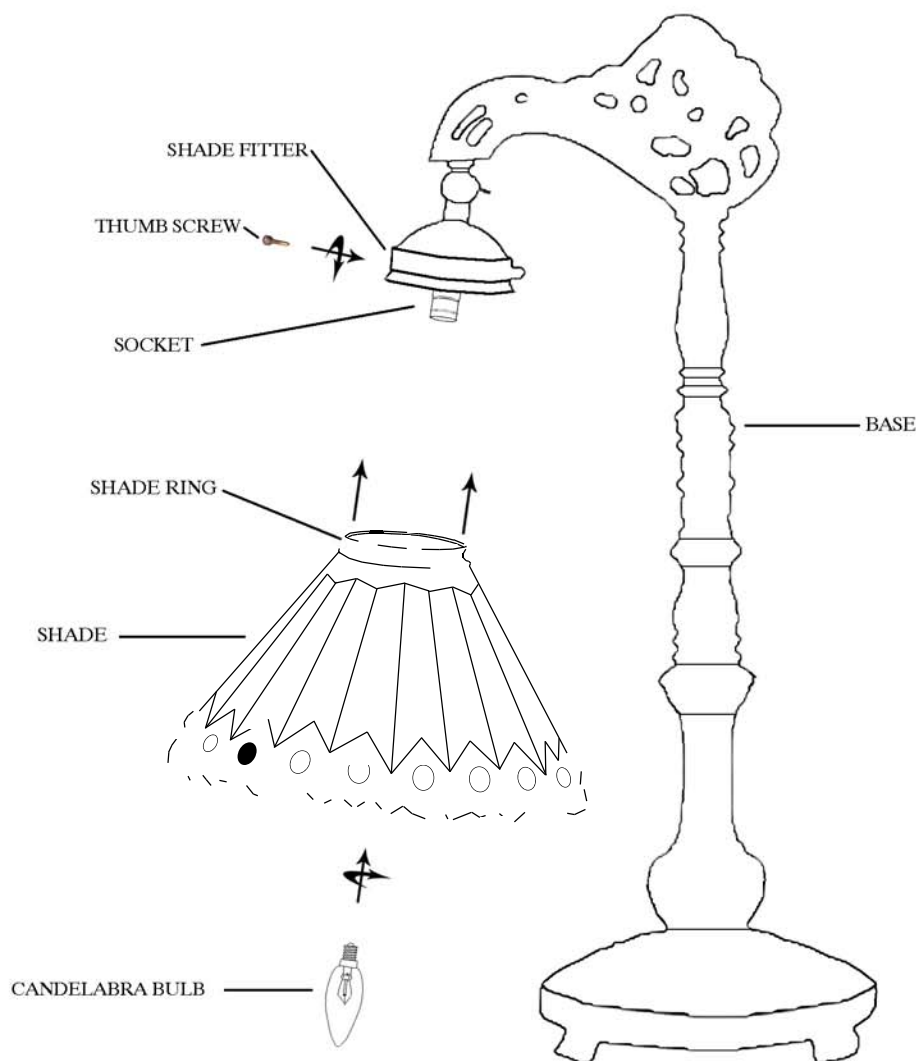

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com