


# ASSEMBLY INSTRUCTIONS FOR #36501 (FA19-TR860-22-5)

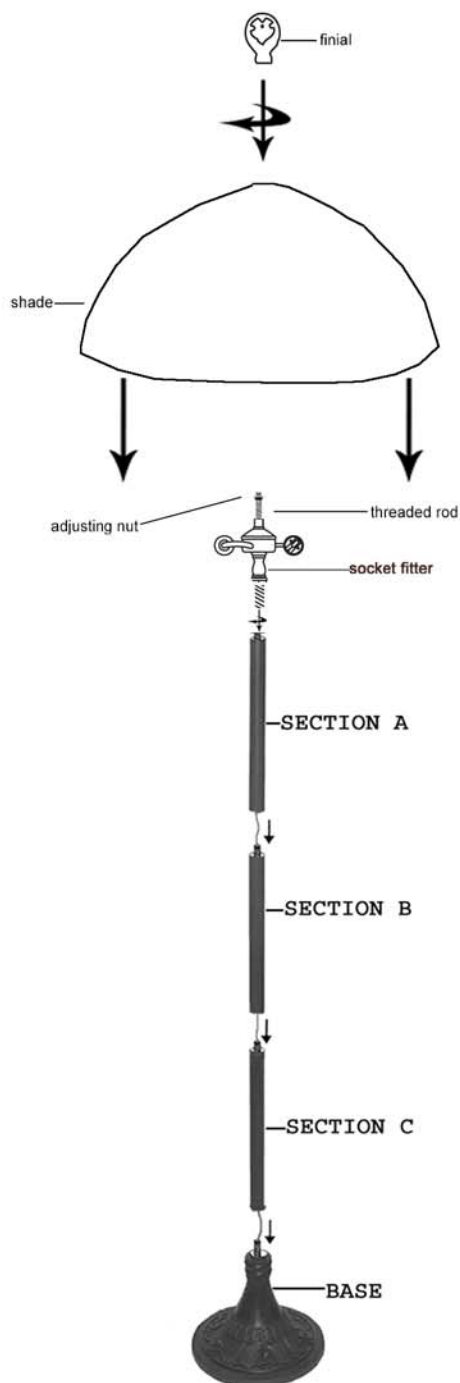

## IMPORTANT

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Screw threaded socket fitter into pipe section A.
2. Screw pipe section A into pipe section B.
3. Screw pipe section B into pipe section C.
4. Screw all pipe sections into base.
5. Screw bulbs (3) into sockets.
6. Place shade onto threaded rod and seat adjusting nut.
7. Screw finial onto threaded rod and tighten.
8. Plug lamp into wall and ENJOY!

**CAUTION: Do NOT over tighten!**



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)