



# ASSEMBLY INSTRUCTIONS FOR (QGL1SCD-05-)

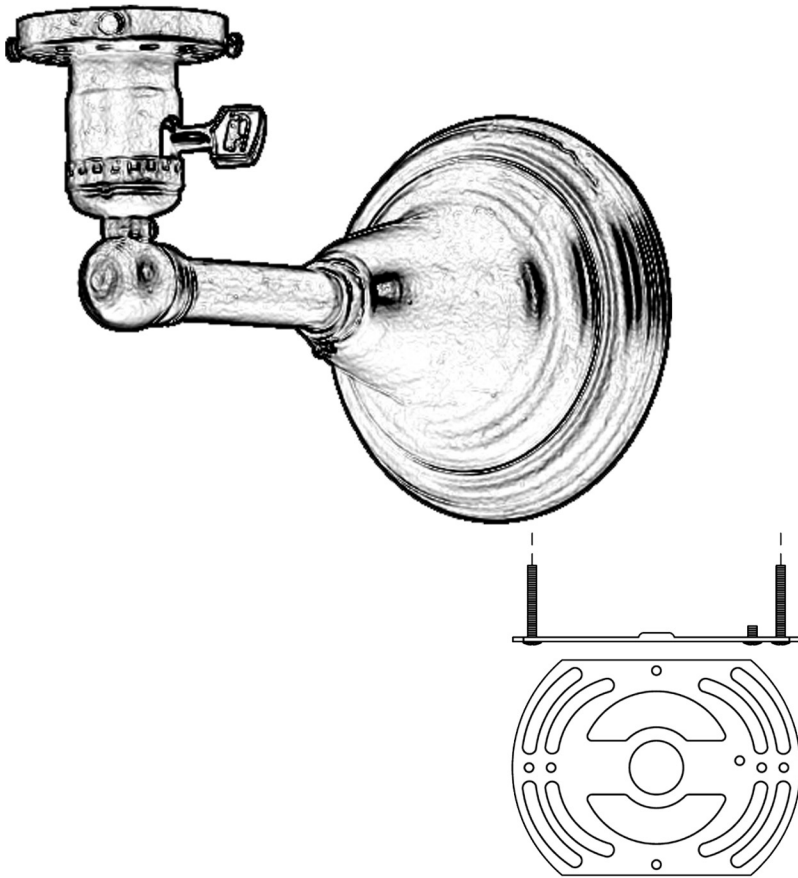

A-765	BRASS SCREW ON U	1
A-2952	LG BRASS ELBOW T	1
A-3059	ROUND BRASS CANO	1
T34	INCHES OF 3/4" R	6
A-3003	3/4" ROUND BRASS	2
7"PIPE	7" PIPE 3/4" T X	1
6-4653-J	1/8 IP X 1 3/8"	2
8/32 BR SCRW	8/-32X3/8" BRASS	3
A-111	VICTORIAN SOCKET	1
L	ASSEMBLY LABOR	20
--493	250' BROWN WIRE	2
A-2759	UNIVERSAL CIRCLE	1
8-32 SCREW	8-32 X 1-1/2" AB	2
90/390	SPIDER WASHER	2
90-283	1" NIPPLE	2
90-1035	1/8IP LOCK NUTS	2

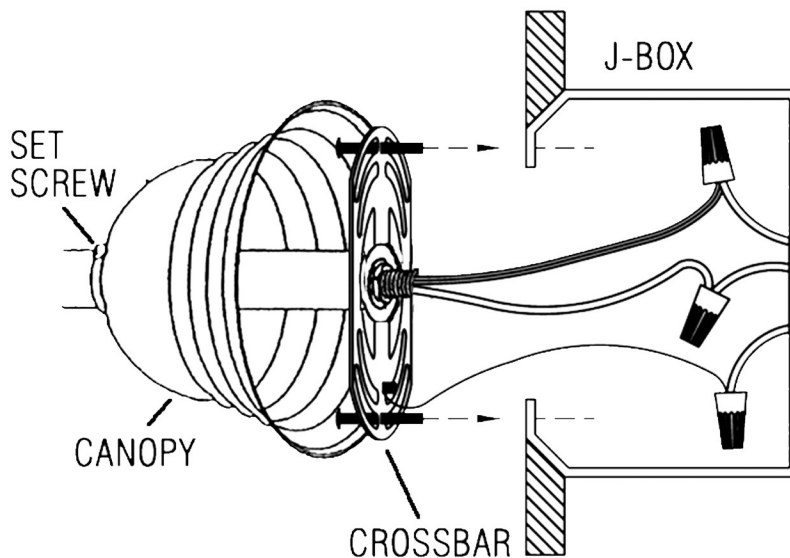

## IMPORTANT

TURN OFF THE POWER AT THE  
MAIN FUSE OR CIRCUIT BREAKER  
BOX BEFORE  
STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL  
PARTS BEFORE ASSEMBLY. BULBS ARE  
NOT INCLUDED

1. Loosten set screw and slide canopy as far up tube/neck as possible.
2. Attach crossbar to J-BOX using screws provided.
3. Wire sconce to J-BOX per local electrical code.
4. Slide canopy back down tube/neck over crossbar tightly against wall. Secure by tightening set screw.
5. Turn power on to J-Box



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)