

ASSEMBLY INSTRUCTIONS FOR (QGL1SCC-05-)

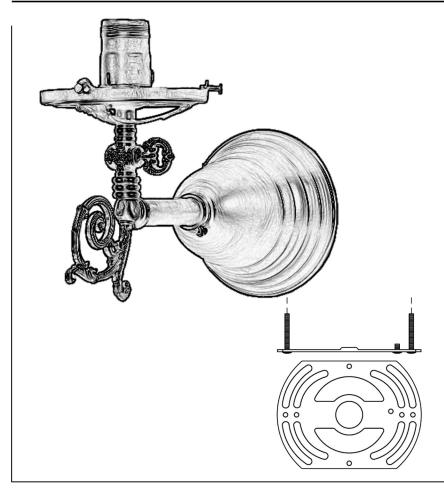

A 701		4
A-791	BRASS BEEHIVE SL	1
A-3014	SCROLL BRASS ARM	1
T34	INCHES OF 3/4" R	6
7"PIPE	7" PIPE 3/4"T X	1
A-2759	UNIVERSAL CIRCLE	1
A-3003	3/4" ROUND BRASS	2
8-32 SCREW	8-32 X 1-1/2" AB	2
A-2894	BRASS THUMB SCRE	3
A-3922	FIXED BRASS GASC	1
A-3556	CAST BRASS HOLDE	1
A-2975	LG BRASS TEE 1 1	1
a-4059	BRASS KEYLESS SO	1
A-4113	18" GROUND WIRE/	1
493	250' BROWN WIRE	2
90/390	SPIDER WASHER	2
90-283	1" NIPPLE	1
90-1035	1/8IP LOCK NUTS	2
L	ASSEMBLY LABOR	35

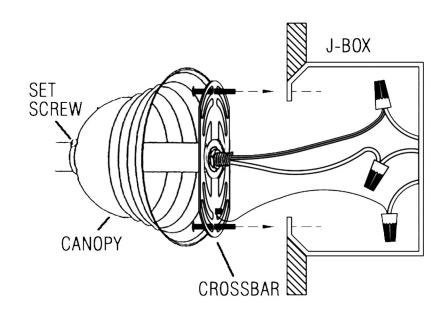

IMPORTANT
TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE **NOT INCLUDED**

- 1. Loosten set screw and slide canopy as far up tube/neck as possible.
- 2. Attach crossbar to J-BOX using screws provided.
- 3. Wire sconce to J-BOX per local electrical code.
- 4. Slide canopy back down tube/neck over crossbar tightly against wall. Secure by tightening set screw.
- 5. Turn power on to J-Box



"A Commitment to Excellence in Lighting and Service"