



# ASSEMBLY INSTRUCTIONS FOR (QGL1SFC-05-)

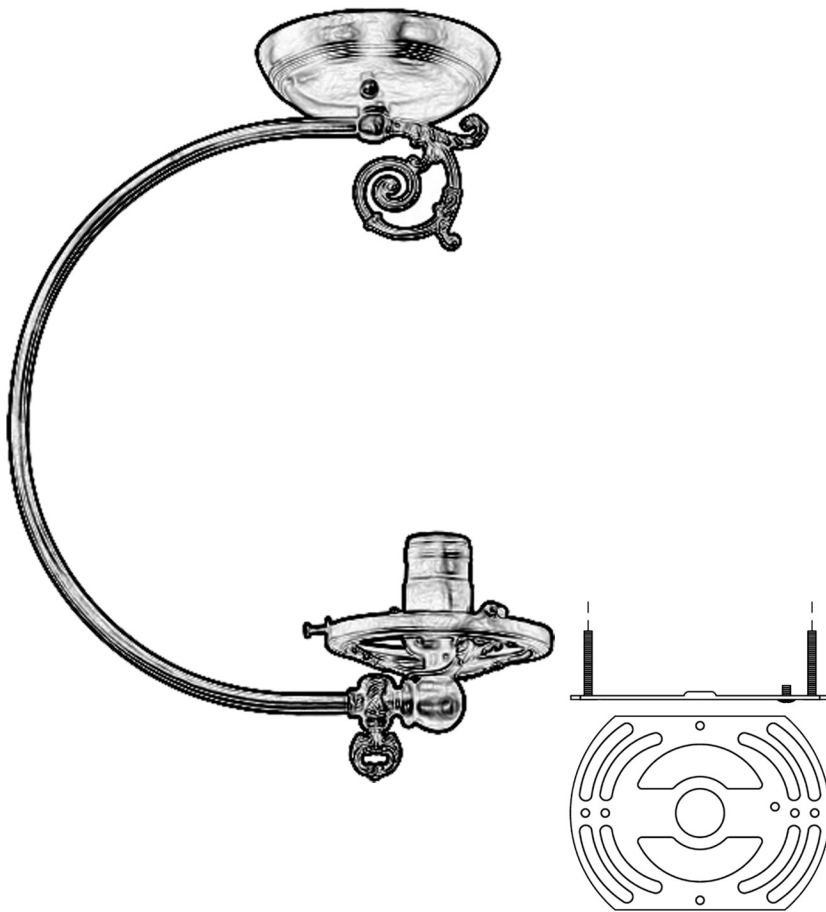

AA-3563	5.25"W SPUN BRAS	1
A-4018	BRASS BENT ARM	1
A-3922	FIXED BRASS GASC	1
A-3556	CAST BRASS HOLDE	1
A-4126	ACANTHUS BRASS A	1
A-2952	LG BRASS ELBOW T	1
L	ASSEMBLY LABOR	35
A-3034	KEYLESS SHORT SO	1
8-32 SCREW	8-32 X 1-1/2" AB	2
A-2894	BRASS THUMB SCRE	3
A-4113	18" GROUND WIRE/	1
--493	250' BROWN WIRE	2
90/390	SPIDER WASHER	2
90-283	1" NIPPLE	2
90-1035	1/8IP LOCK NUTS	2

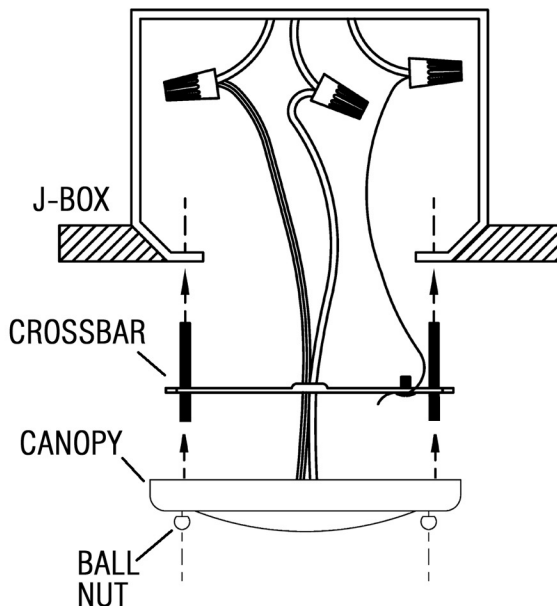

## IMPORTANT

TURN OFF THE POWER AT THE  
MAIN FUSE OR CIRCUIT BREAKER  
BOX BEFORE  
STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL  
PARTS BEFORE ASSEMBLY. BULBS ARE  
NOT INCLUDED

1. Remove crossbar from scone plate.  
(save ball nuts and threaded studs).
2. Attach crossbar to J-BOX using  
studs removed from scone.
3. Wire scone to J-BOX per local  
electrical code.
4. Slide scone canopy over studs  
attached to crossbar and secure  
against ceiling using ball nuts that  
had been removed in step 1.
5. Turn power on to J-Box



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)