
ASSEMBLY INSTRUCTIONS FOR #38484 (SG640-36-4-W296B)

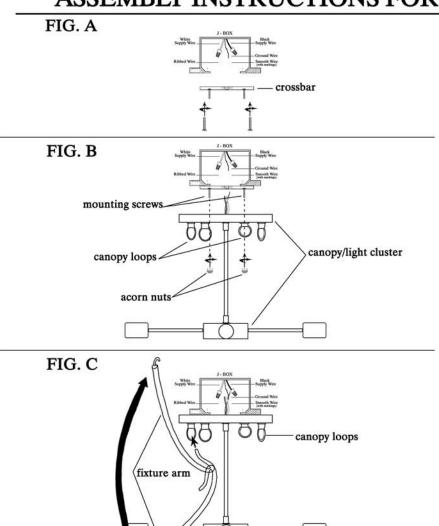

shade loop

shade

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION


CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1. Screw crossbar into j box. FIG. A
- 2. Wire as per local electrical code.
- 3. Place canopy/light cluster onto mounting screws and attach with acorn nuts. FIG. B
- 4. Attach fixture arms to canopy loops as shown. FIG. C
- 5. Place shade up and attach to fixture arms as shown. FIG. C



"A Commitment to Excellence in Lighting and Service"

CUT SHEET, ITEM # 38484

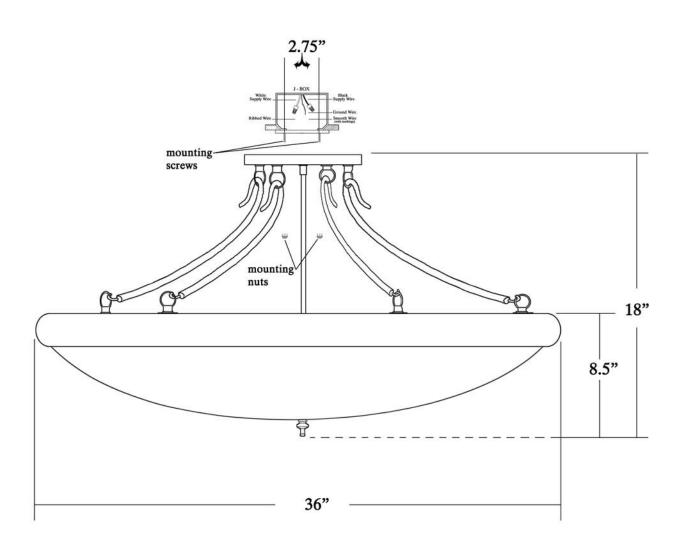

(MEYDA) UL	DRAWN BY 244	40LBS	4/27/09	© MEYDA TIFFANY, INC.				
	VOLTAGE 110	BEIGE, ROOTBEER			BULB#	6		PROJECT NUMBER SG640-36-4-M296B
	ANTIQUE COPPER				TYPE	MEDIUM	SEMI-FLUSHMOUNT	DESIGN NUMBER
	MATERIAL STEEL/ART GLASS				WATT	100	SEMI-FLUSHMOUNT	FINAL MODEL NUMBER