
ASSEMBLY INSTRUCTIONS FOR 48921 (TR844-08R-1-M91)

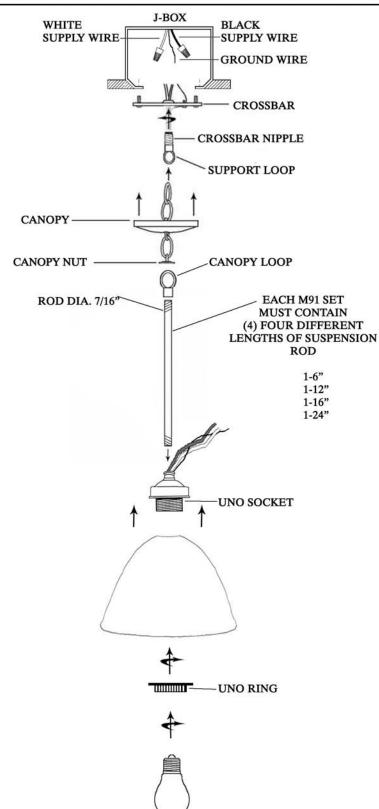

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION


CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1. Screw crossbar to J-box.
- 2. Place fixture electrical cords through fixture rod, fixture loop, one link of chain, support loop, canopy nut, and crossbar.
- 3. Wire as per local electrical code.
- 4. Screw fixture rod to fitter, screw fixture loop to fixture rod screw support loop to crossbar.
- 5. Slide canopy up to ceiling.
- 6. Slide canopy nut up and screw onto support loop, tighten to canopy.



"A Commitment to Excellence in Lighting and Service"

CUT SHEET, ITEM # 48921

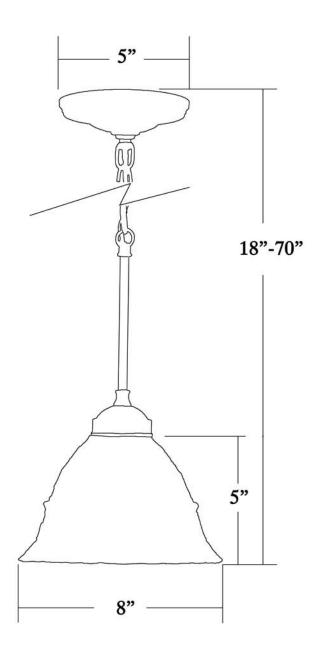

BULB: 1

TYPE: MED.

WATT: 60

	$\widehat{\mathbb{C}}$ DESIGN COPYRIGHT, MEYDA TIFFANY, INC. ALL RIGHTS RESERVED, NO UNAUTHORIZED DUPLICATION					
(MEYDA)	© MEYDA TIFFANY, INC.			TIFFANY ROM	IAN PENDANT	PROJECT NUMBER TR844-08R-1-M91
	DRAWN BY	APRVD. BY	DATE	CEILING PENDANT		DESIGN NUMBER
	244		08/22/08	GLASS/METAL	ANTIQUE	FINAL MODEL NUMBER 48921