


ASSEMBLY INSTRUCTIONS FOR #49066 (17215-2)

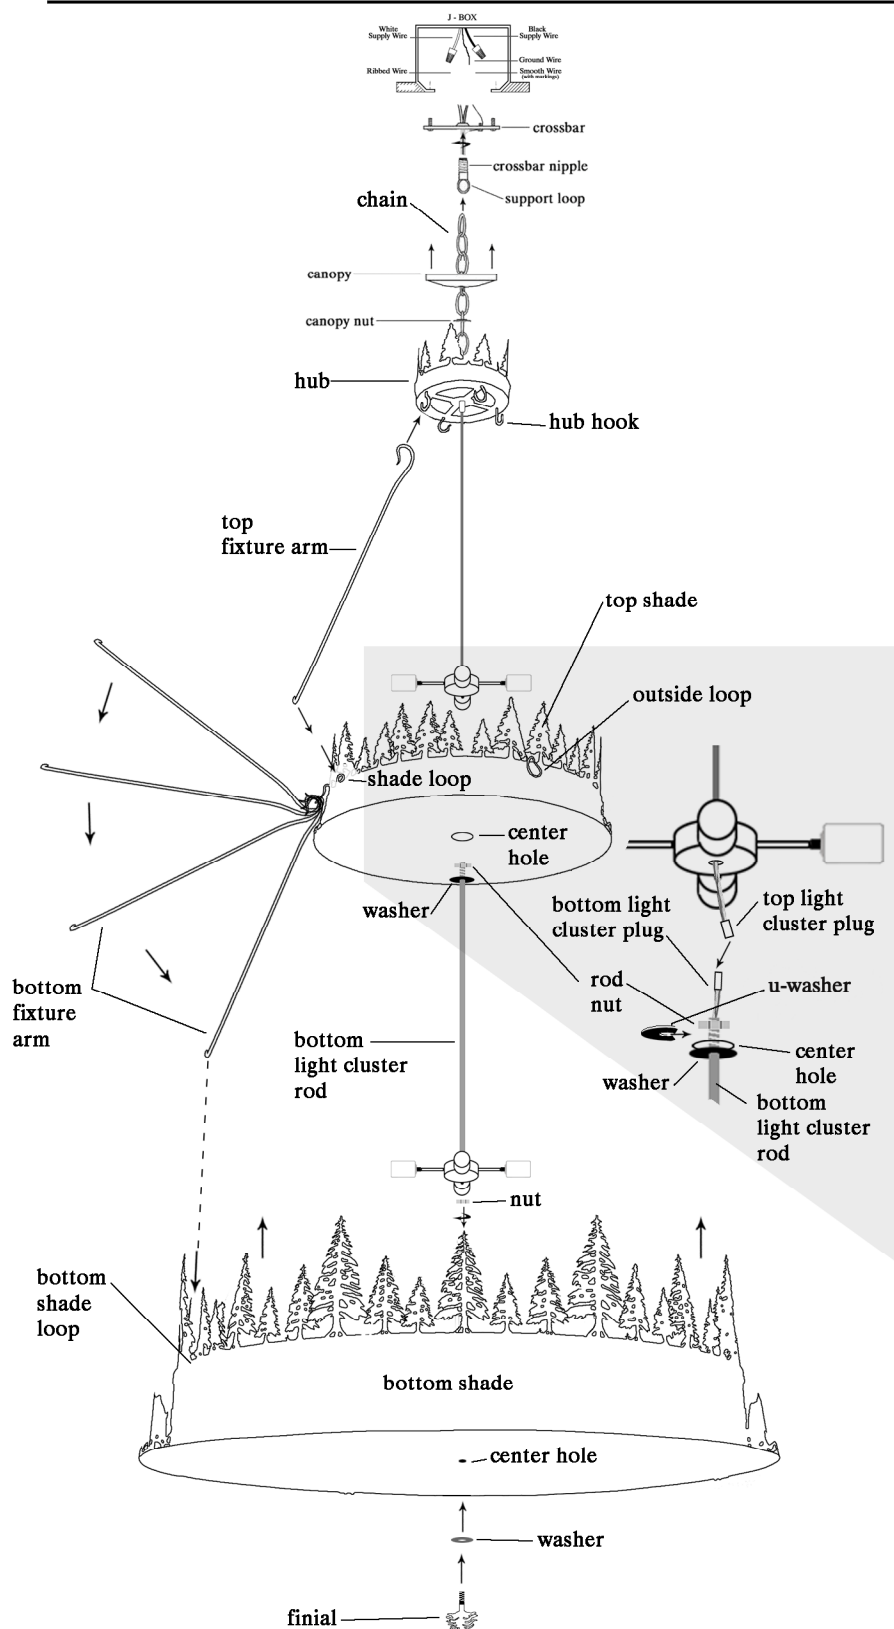

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1. Attach crossbar w/crossbar nipple and support loop to j box.**
- 2. Attach chain to hub loop, place canopy nut onto chain, place canopy onto chain, attach chain to support loop.**
- 3. Wire as per local electrical code.**
- 4. Slide canopy up to ceiling, slide canopy nut and screw onto support loop threads, tighten to canopy.**
- 5. Place top fixture arms onto shade loops than attach to hub hooks.**
- 6. Place bottom light cluster rod up through center hole of top shade, seat to washer. Place u-washer onto light cluster rod, tighten rod nut to shade.**
- 7. Plug top light cluster plug into bottom light cluster plug.**
- 8. Attach bottom fixture arms onto top shade outside loops, hook bottom fixture arms to bottom shade loops.**
- 9. Place finial with washer up through center hole of bottom shade, screw nut onto finial and tighten to shade.**



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com