

ASSEMBLY INSTRUCTIONS FOR 49537 (PN6-RP2906-5)

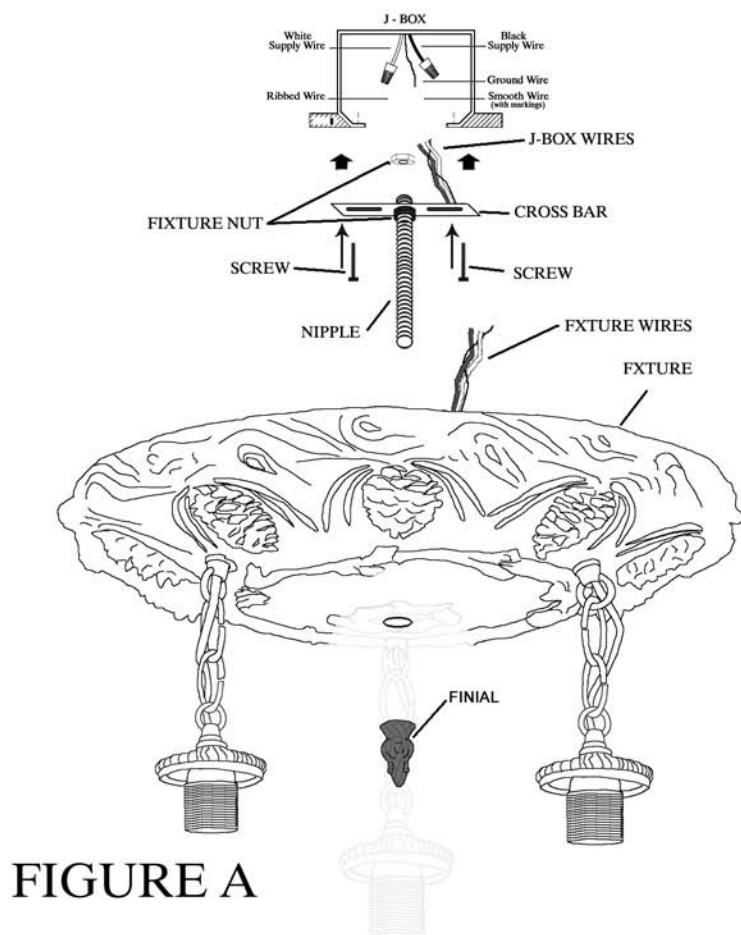


FIGURE A

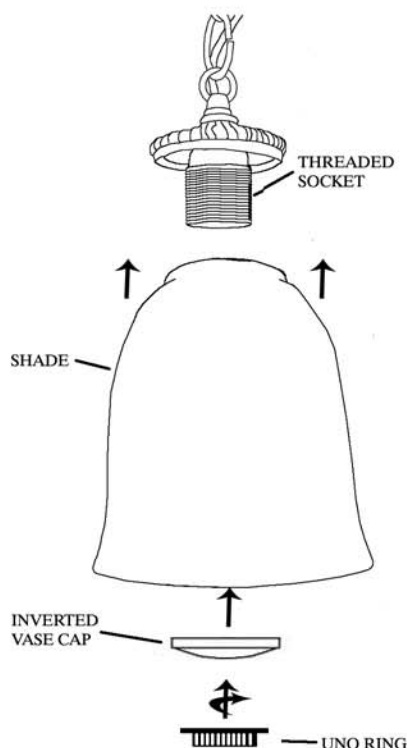


FIGURE B

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Remove crossbar from back of fixture, screw nipple into crossbar approx. 1/2", screw fixture nut onto nipple ring and tighten FIGURE A
2. Screw second fixture nut onto bottom side of nipple to crossbar and tighten. FIGURE A
3. Screw crossbar with nipple into j-box with screws provided. FIGURE A
4. Wire to j-box as per local elec. code
5. Place fixture up and over nipple, screw finial onto nipple and tighten fixture flush to ceiling.
6. Place shade over threaded socket and on to fixture. FIGURE B
7. Place inverted vase cap over threaded socket and onto fixture. (MAKE SURE VASE CAP IS PLACED ON FIXTURE AS SHOWN IN FIGURE B.)
8. Screw uno ring onto threaded socket and tighten FIGURE B.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com