


# ASSEMBLY INSTRUCTIONS FOR #50805 (MS259-26-1-L259-1)

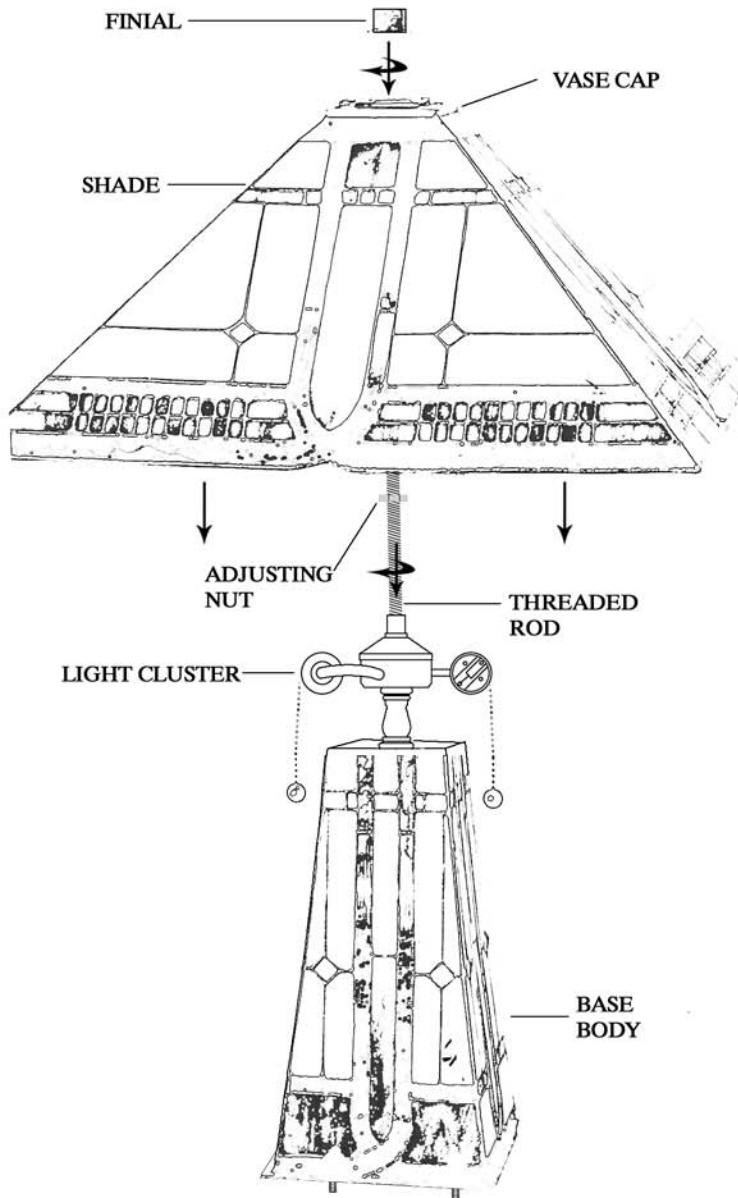


## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. SCREW THREADED ROD INTO TOP OF LIGHT CLUSTER.
2. SCREW ADJUSTING NUT APROX. ONE INCH DOWN ONTO THREADED ROD. (SCREW ADJUSTING NUT UP OR DOWN TO INSURE PROPER SEATING OF FINIAL TO VASE CAP)
3. PLACE SHADE ONTO THREADED ROD & SEAT TO ADJUSTING NUT.
4. SCREW FINIAL ONTO THREADED ROD AND TIGHTEN TO SHADE VASE CAP.

TO CHANGE BULB IN BASE UNPLUG LAMP FROM WALL OUTLET, LET BULB COOL. UNSCREW WING NUTS (2) FROM BOTTOM OF BASE, REMOVE BASE FOOT AND PULL FROM BASE BODY SCREW NEW BULB INTO CNDL. SOCKET.

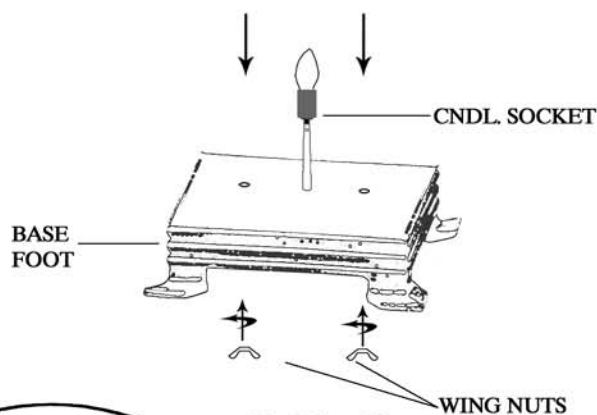

*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)