


# ASSEMBLY INSTRUCTIONS FOR #50812 (TR837-18-1-RHC20)

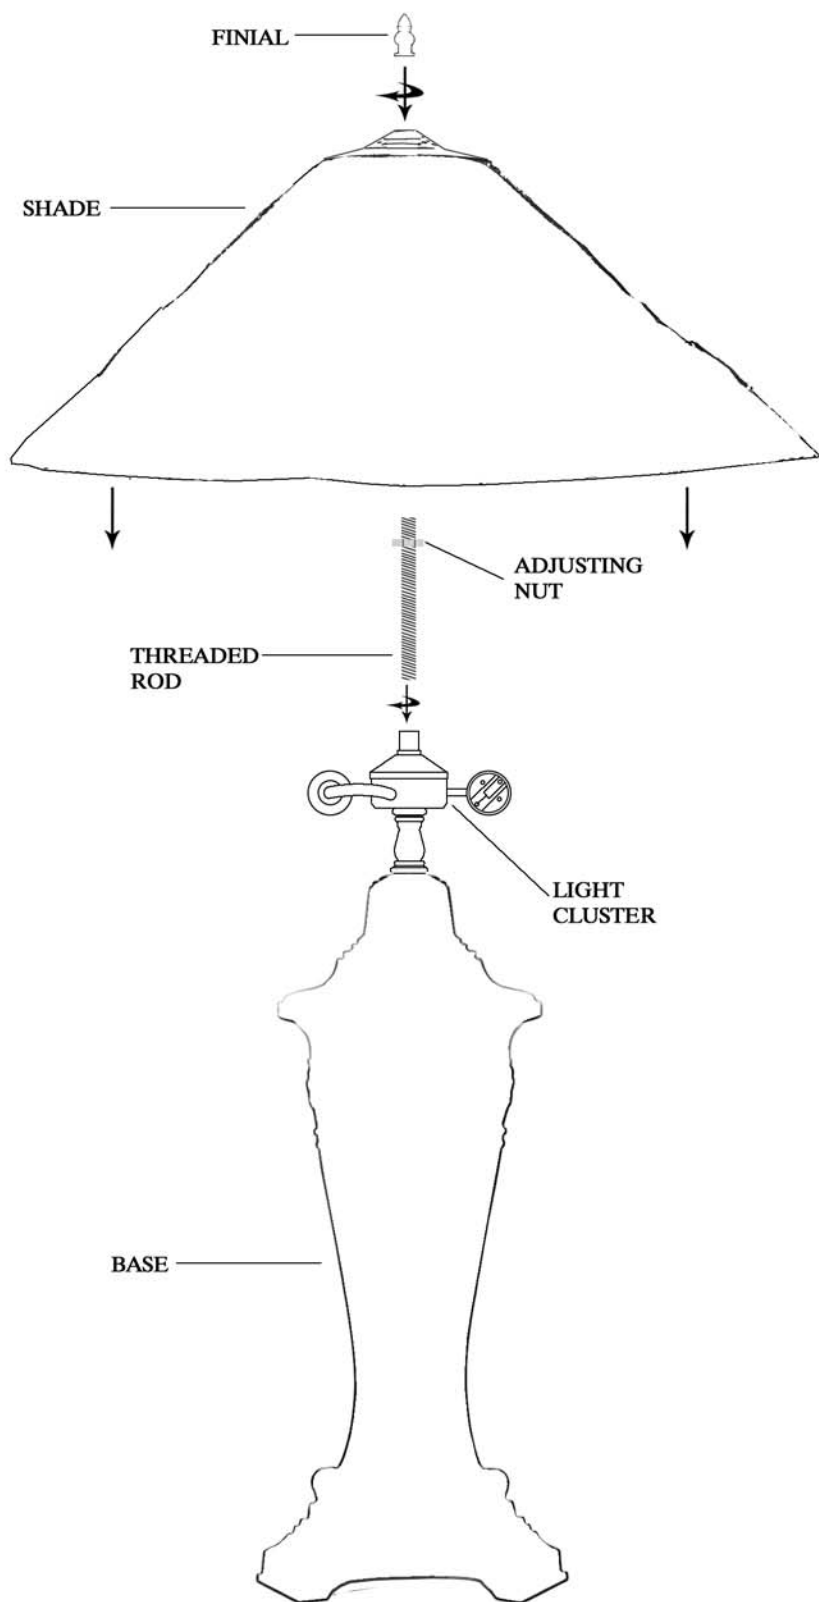

## IMPORTANT

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. SCREW THREADED ROD INTO LIGHT CLUSTER.
2. SCREW ADJUSTING NUT APROX. 1" DOWN ONTO THREADED ROD.
3. PLACE SHADE ONTO THREADED ROD AND SEAT TO ADJUSTING NUT.
4. SCREW FINIAL ONTO THREADED ROD AND TIGHTEN TO VASE CAP.  
( IF SHADE DOES NOT TIGHTEN TO ADJUSTING NUT SCREW ADJUSTING NUT 1/4" AND RETIGHTEN FINIAL.)



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)