


ASSEMBLY INSTRUCTIONS FOR #51064

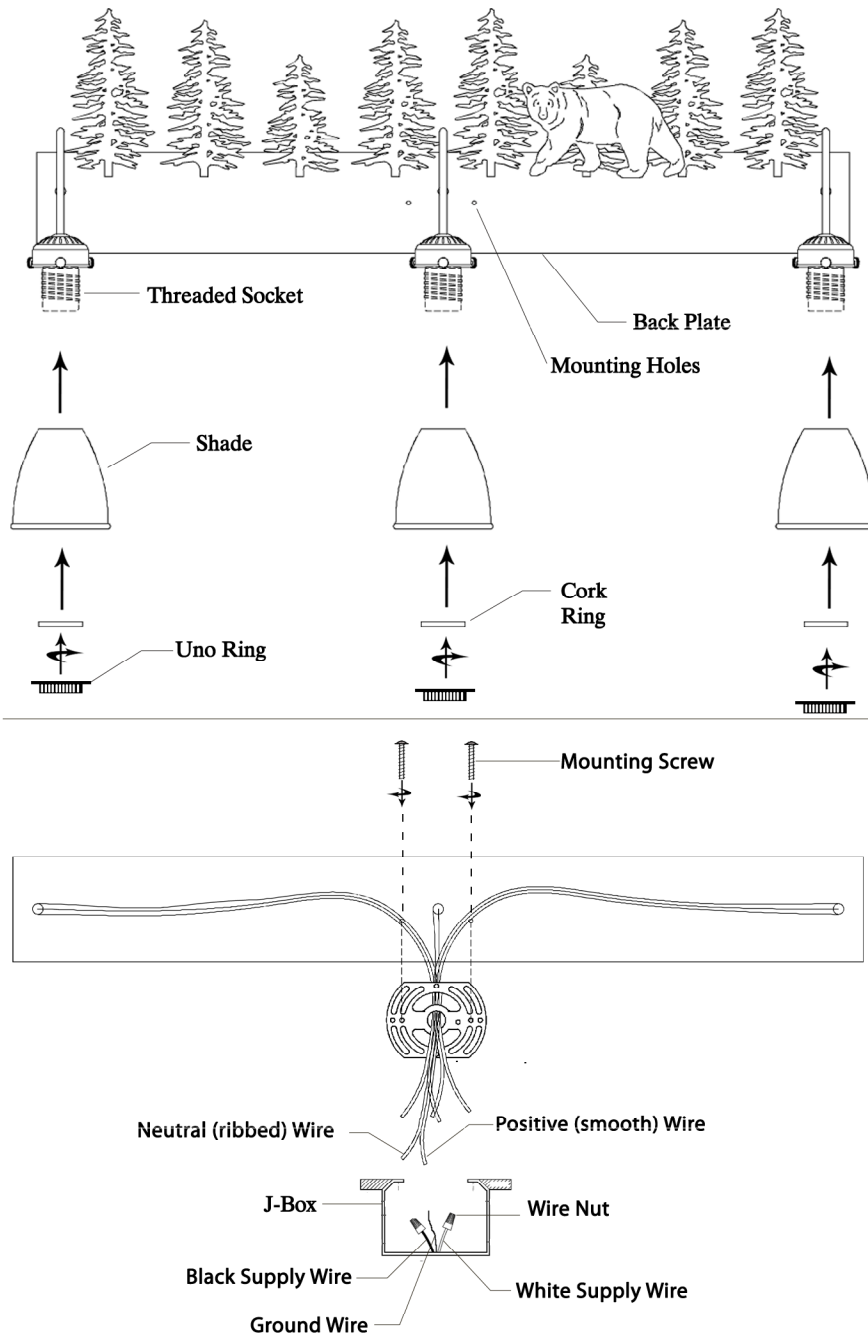

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Attach crossbar to J-box using customer supplied screws.
- 2.) Consolidate the three brown electrical wires and ground wire protruding out of the back plate.
- 3.) Split the brown wires at the ends, as shown, and wire nut the three positive (smooth) wires to the black supply wire on the j-box.
- 4.) Wire nut the three the neutral (ribbed) wires to the white supply wire on the j-box.
- 5.) Wire nut the one ground wire coming from the back plate to the ground wire on the j-box
- 6.) Attach back plate to crossbar using mounting screws provided.
- 7.) Place shades then cork washers onto threaded sockets and secure with uno rings.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com