


ASSEMBLY INSTRUCTIONS FOR #51095 (1-0049045001-13)

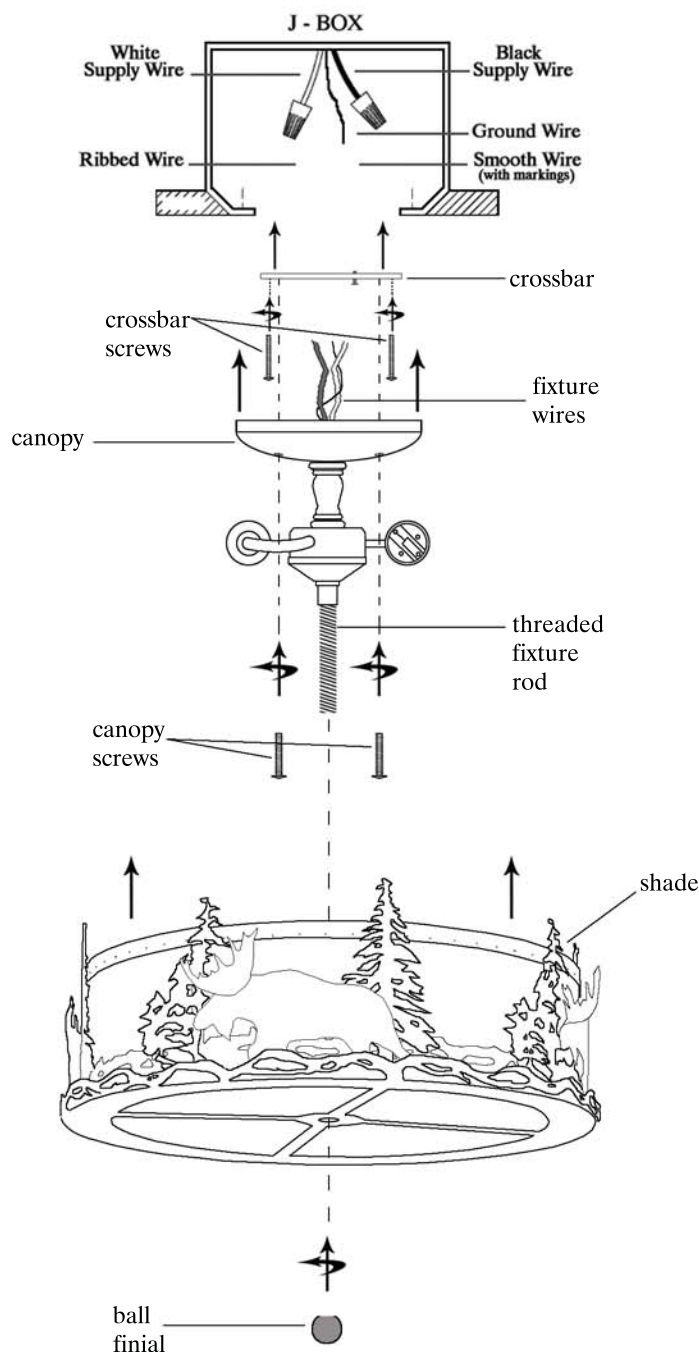

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Screw crossbar into J box with crossbar screws provided.
2. Wire fixture wires to J box wires as per local electrical code.
3. Screw canopy into crossbar with canopy screws.
4. Place light bulbs into sockets
5. Place shade up and onto threaded fixture rod.
6. Screw ball finial onto threaded fixture rod and tighten to shade.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com