


ASSEMBLY INSTRUCTIONS FOR #51851 (SG640-12SC-1-M130)

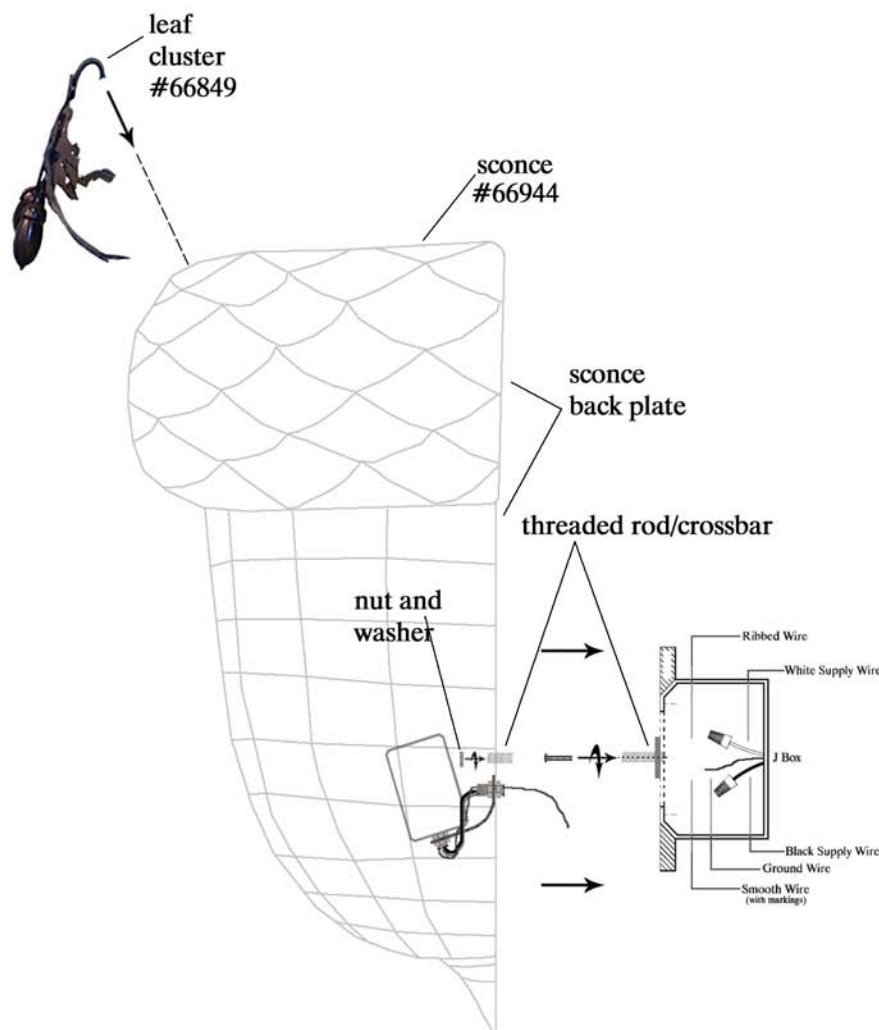

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Remove nut and washer from threaded rod/crossbar located on inside of scone back plate. Save nut and washer for reattachment.
2. Screw threaded rod/crossbar into J box with screws provided.
3. Wire scone elec. wires to J box elec. wires as per local electrical code.
4. Place scone onto threaded rod/crossbar and attach with nut and washer that had been removed in step one.
5. Hang leaf clusters onto front edge of scone as shown





"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com

CUT SHEET, ITEM #51851

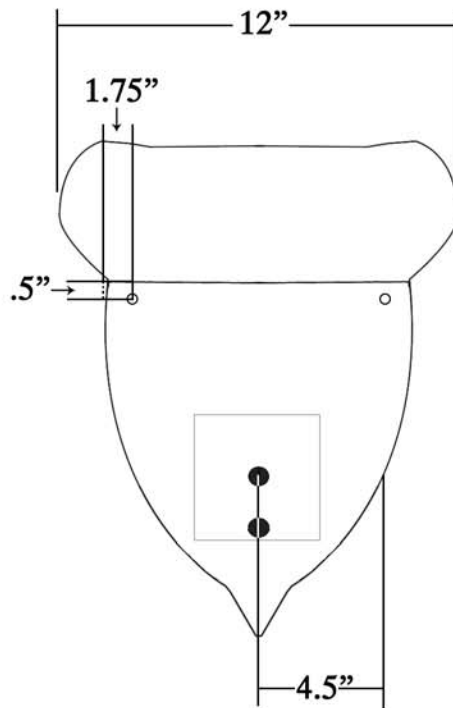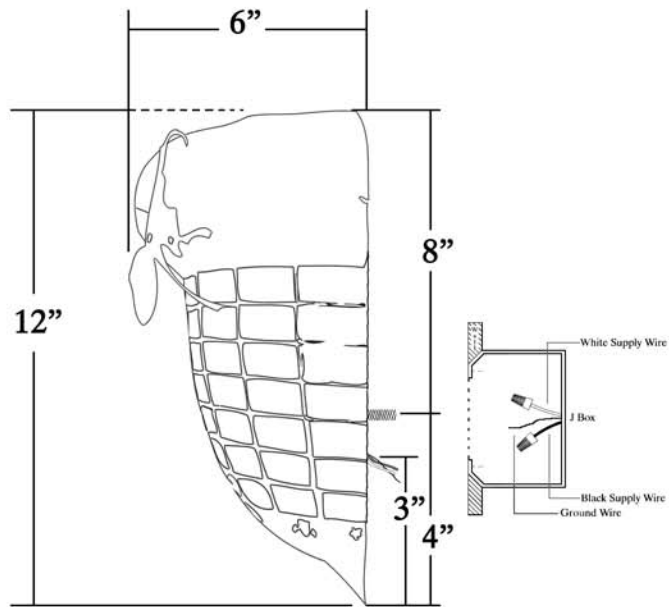

DRAWN BY 244		WEIGHT 6LBS.		DATE 10/16/09		© MEYDA TIFFANY, INC. © DESIGN COPYRIGHT, MEYDA TIFFANY, INC. ALL RIGHTS RESERVED, NO UNAUTHORIZED DUPLICATION				
VOLTAGE 110		GLASS COLOR ROOTBEER, GREEN			BULB # 1		DISCRIPTION ACORN WALL SCONCE		PROJECT NUMBER	
FINISH PATINA					TYPE MEDIUM				DESIGN NUMBER SG640-12SC-1-M130	
MATERIAL GLASS, BRASS					WATT 100		FIXTURE TYPE WALL SCONCE		FINAL MODEL NUMBER 51851	