
ASSEMBLY INSTRUCTIONS FOR #51852 (SG640-12SC-2-M130)

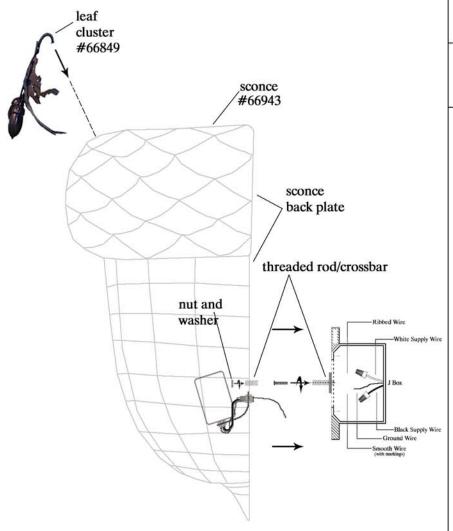

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION


CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED


- Remove nut and washer form threaded rod/crossbar located on inside of sconce back plate.
 Save nut and washer for reattachment.
- Screw threaded rod/crossbar into J box with screws provided.
- 3. Wire sconce elec. wires to J box elec. wires as per local electrical code.
- 4. Place sconce onto threaded rod/ crossbar and attach with nut and washer that had been removed in step one.
- 5. Hang leaf clusters onto front edge of sconce as shown



"A Commitment to Excellence in Lighting and Service"

CUT SHEET, ITEM #51852

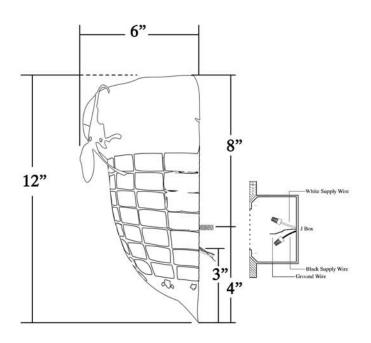

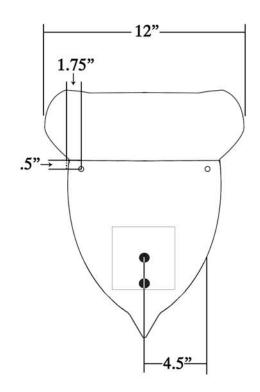

(MEYDA) UI,	244 WEIGHT 10/16/09 © MEYDA TIFFANY, INC. © DESIGN COPYRIGHT, MEYDA TIFFANY, INC. ALL RIGHTS RESERVED, NO UNAUTHORIZED DUPLICATION			
	110 GLASS COLOR BEIGE, ROOTBEER	BULB# 1	ACORN WALL	PROJECT NUMBER
	PATINA PATINA	TYPE MEDIUM	SCONCE	SG640-12SC-2-M130
	GLASS,BRASS	WATT 100	WALL SCONCE	FINAL MODEL NUMBER 51852