

ASSEMBLY INSTRUCTIONS FOR #51885 Q45-21-8002-QISF-30-100)

FIG.A

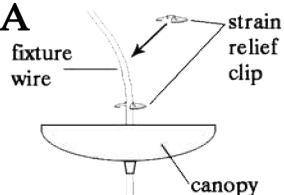


FIG.B

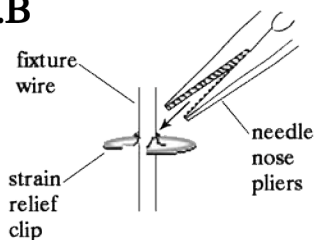


FIG.C

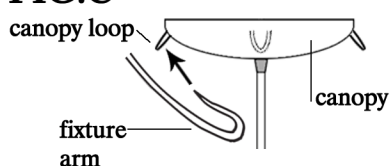


FIG.D


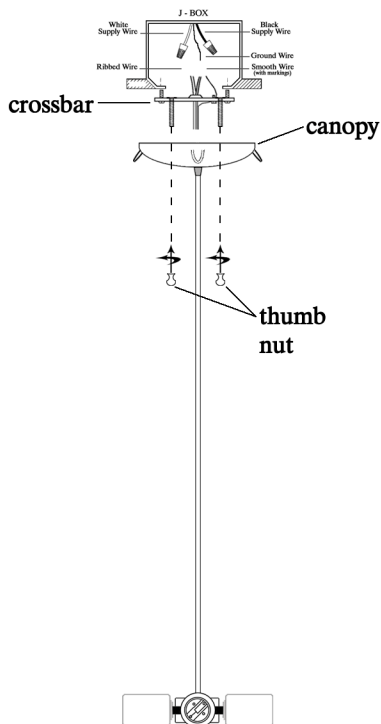


FIG.E

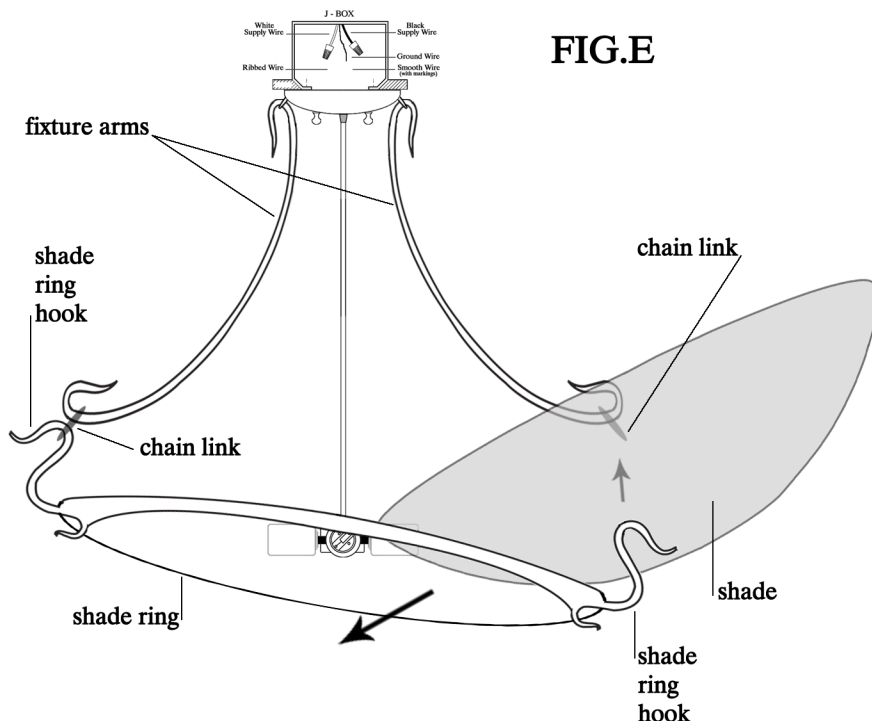

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Thread fixture wire through canopy.
2. Add 1" to pre determined fixture wire length and place strain relief clip onto wire at this location. FIG.A
(Be Sure To Leave A Minimum Of 6" Of Wire Above This Location For Attachment To Jbox Wires).
3. Using needle nose pliers crimp strain relief clip onto fixture wire. FIG.B
VERY IMPORTANT: WHEN ADJUSTING FIXTURE WIRE LENGTH BE SURE TO LEAVE A MINIMUM OF 4" BETWEEN LIGHT BULBS AND SHADE INTERIOR.
4. Refer to FIG.C. Place fixture arms through canopy loop as shown. FIG.C
5. Screw crossbar to j-box. FIG.D
6. Wire as per local electrical code.
7. Place canopy with fixture arms up and onto canopy screws and attach with thumb nuts. FIG.D
8. Place chain links onto fixture arms as shown in FIG.E
9. Place two shade ring hooks through chain links. (leave one shade ring hook unhooked). FIG.E
10. Place shade into shade ring. FIG.E
(be sure to hold shade ring secure when placing shade into ring)
11. When shade is seated into ring lift shade ring and shade and attach remaining shade ring hook to chain link. FIG.E



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com