




CUT SHEET, ITEM #52108

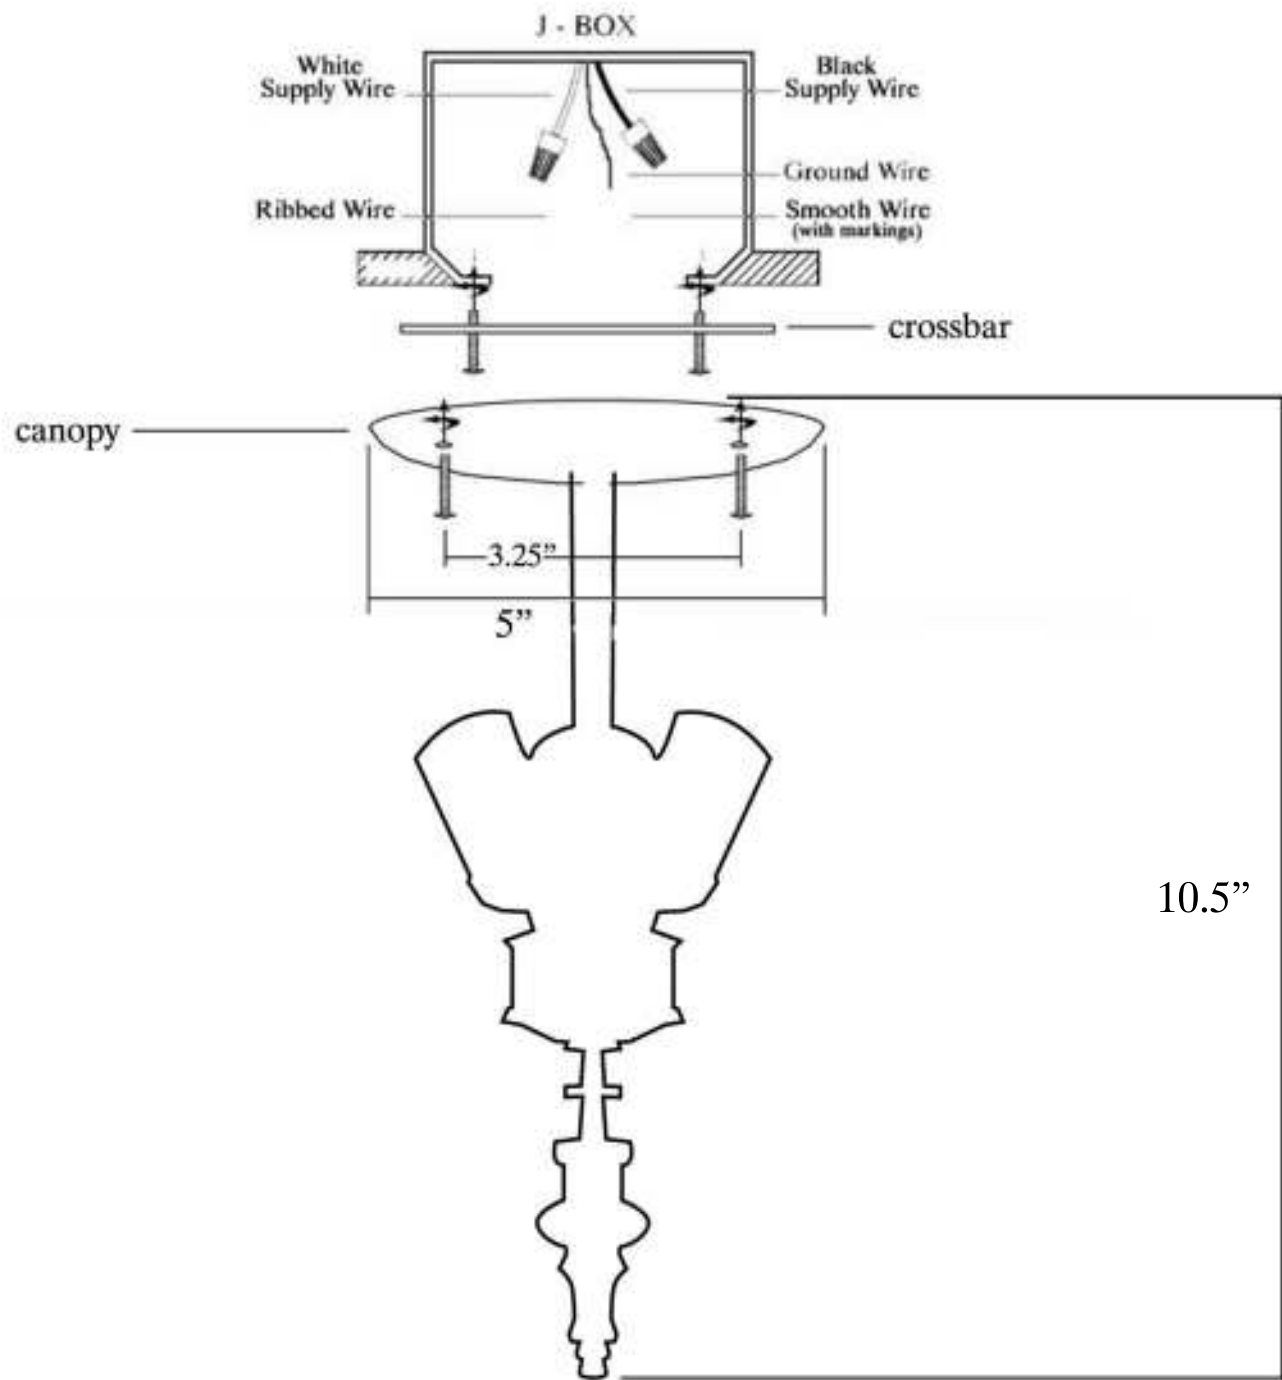

BULB: 3
TYPE:
WATT: 60
NOT INCLUDED




© DESIGN COPYRIGHT, MEYDA TIFFANY, INC. ALL RIGHTS RESERVED, NO UNAUTHORIZED DUPLICATION

© MEYDA TIFFANY, INC.

DESIGNED BY J599	APPROVED BY	DATE 5-20-09	DESCRIPTION	PROJECT NUMBER
VOLTAGE	WEIGHT		FINISH	DESIGN NUMBER
				FINAL MODEL NUMBER 52108

ASSEMBLY INSTRUCTIONS FOR #52108 (M123)

0244-04/10/12

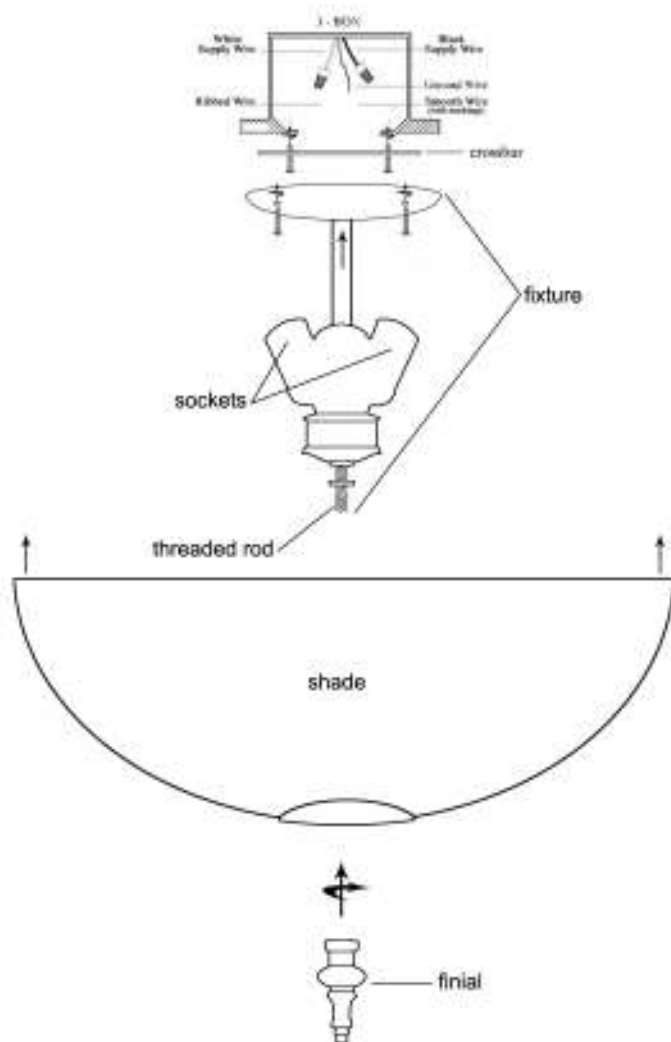

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Attach crossbar to j box.
2. Wire as per local electrical code.
3. Attach fixture to crossbar.
4. Place light bulbs into sockets.
5. Place shade up and onto threaded rod, screw finial onto threaded rod and tighten to shade.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com

